DV8 Series

Condensing Dryer
user manual

Planet First 100% Recycled Paper

This manual is made with 100 % recycled paper.

imagine the possibilities

Thank you for purchasing this Samsung product.

DC68-03408G-01

SAMSUNG

contents

SAFETY INFORMATION 4

4 What you need to know about Safety Instructions
4 Important safety symbols and precautions

INSTALLING YOUR DRYER 11

11 Unpacking your dryer and Installing guide
11 See dryer exterior
12 Check before installing
12 Before using the product
12 Important to installer
12 Location considerations
13 Alcove or closet installation
13 Electrical requirements
13 Grounding
14 Installation side by side
14 Final installation checklist
15 Draining water without using the water tank
15 Connecting the drain hose
17 Installation stacking
18 Door Reversal

OPERATING INSTRUCTIONS, TIPS 20

20 Overview of the control panel
23 Child lock
23 Sound on/off
24 Delay end
24 Interior lamp (on some models)
25 Smart check
26 Rack dry (on some models)
27 Load the dryer properly
27 Getting started

CARE AND CLEANING 28

28 Clean the filter case
28 Clean the condenser
28 Control panel
28 Tumbler
28 Stainless steel tumbler
28 Dryer exterior
29 Dumping condensed water ( )
29 Cleaning the filter case ( )
30 Cleaning the condenser assembly

DV80H4000CX-03408G-01_EN.indd Sec9:2 2014-08-20 3:19:35

SPECIAL LAUNDRY TIPS 31
31 Special laundry tips

TROUBLESHOOTING 32
32 Check these points if your dryer…
34 Information codes

APPENDIX 35
35 Fabric care chart
36 Protecting the environment
36 Declaration of conformity
36 Specifications
37 Cycle chart
37 Consumption data

DV80H4000CX-03408G-01_EN.indd Sec9:3 2014-08-20 3:19:35

safety information

Congratulations on your new Samsung Dryer. This manual contains important information on the installation, use, and care of your appliance. Please take the time to read this manual to take full advantage of your dryer's many benefits and features.

⚠ WARNING - Risk of Fire

- Clothes dryer installation must be performed by a qualified technician.
- Install the clothes dryer according to the manufacturer's instructions and local codes.
- To reduce the risk of severe injury or death, follow all installation instructions.

WHAT YOU NEED TO KNOW ABOUT SAFETY INSTRUCTIONS

Warnings and Important Safety Instructions in this manual do not cover all possible conditions and situations that may occur. It is your responsibility to use common sense, caution, and care when installing, maintaining, or operating your dryer.

Always contact your manufacturer about problems or conditions you do not understand.

IMPORTANT SAFETY SYMBOLS AND PRECAUTIONS

⚠ **WARNING**	Hazards or unsafe practices that may result in **severe personal injury or death**.
⚠ **CAUTION**	Hazards or unsafe practices that may result in **minor personal injury or property damage**.
CAUTION	To reduce the risk of fire, explosion, electric shock, or personal injury when using your dryer, follow these basic safety precautions:

	Do NOT attempt.
	Do NOT disassemble.
	Do NOT touch.
	Follow directions explicity.
	Unplug the power plug from the wall socket.
	Make sure the machine is grounded to prevent electric shock.
	Call the service center for help.
	Note
	Read operator's manual

These warning icons are here to prevent injury to you and others.
Please follow them explicitly.
After reading this section, keep it in a safe place for future reference.
Read all instructions before using the appliance.

DV80H4000CX-03408G-01_EN.indd Sec1:4 2014-08-20 3:19:35

⚠ WARNING To reduce the risk of fire, electric shock, or injury to persons when using your appliance, follow basic precautions, including the following:

Do not let children (or pets) play in or on your product. The product door does not open easily from the inside and children may be seriously injured if trapped inside.

This appliance is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

For use in Europe: This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

This appliance should be positioned so that the power plug, the water supply taps, and the drain pipes are accessible.

For appliances with ventilation openings in the base, that a carpet must not obstruct the openings.

The new hose-sets supplied with the appliance are to be used and that old hose-sets should not be reused.

CAUTION: In order to avoid a hazard due to inadvertent resetting of the thermal cut-out, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.

The tumble dryer is not to be used if industrial chemicals have been used for cleaning.

DV80H4000CX-03408G-01_EN.indd Sec1:5 2014-08-20 3:19:35

The lint trap has to be cleaned frequently, if applicable.

Lint must not to be allowed to accumulate around the tumble dryer. (not applicable for appliances intended to be vented to the exterior of the building)

Adequate ventilation has to be provided to avoid the back flow of gases into the room from appliances burning other fuels, including open fires.

Do not dry unwashed items in the tumble dryer.

Items that have been soiled with substances such as cooking oil, acetone, alcohol, petrol, kerosene, spot removers, turpentine, waxes and wax removers should be washed in hot water with an extra amount of detergent before being dried in the tumble dryer.

Items such as foam rubber (latex foam), shower caps, waterproof textiles, rubber backed articles and clothes or pillows fitted with foam rubber pads should not be dried in the tumble dryer.

Fabric softeners, or similar products, should be used as specified by the fabric softener instructions.

The final part of a tumble dryer cycle occurs without heat (cool down cycle) to ensure that the items are left at a temperature that ensures that the items will not be damaged.

Remove all objects from pockets such as lighters and matches.

WARNING: Never stop a tumble dryer before the end of the drying cycle unless all items are quickly removed and spread out so that the heat is dissipated.

Exhaust air must not be discharged into a flue which is used for exhausting fumes from appliances burning gas or other fuels.

The appliance must not be installed behind a lockable door, a sliding door or a door with a hinge on the opposite side to that of the tumble dryer, in such a way that a full opening of the tumble dryer door is restricted.

Children of less than 3 years should be kept away unless continuously supervised.

DV80H4000CX-03408G-01_EN.indd Sec1:6 2014-08-20 3:19:35

WARNING SEVERE WARNING SIGNS FOR INSTALLATION

The installation of this appliance must be performed by a qualified technician or service company.
- Failure to do so may result in electric shock, fire, an explosion, problems with the product, or injury.

Plug the power cord into an AC 220-240 V 50 Hz wall socket or higher and use the socket for this appliance only. In addition, do not use an extension cord.
- Sharing a wall socket with other appliances using a power strip or extending the power cord may result in electric shock or fire.
- Ensure that the power voltage, frequency and current are the same as those of the product specifications. Failure to do so may result in electric shock or fire. Plug the power plug into the wall socket firmly.

Remove all foreign substances such as dust or water from the power plug terminals and contact points using a dry cloth on a regular basis.
- Unplug the power plug and clean it with a dry cloth.
- Failure to do so may result in electric shock or fire.

Keep all packaging materials well out of the reach of children, as packaging materials can be dangerous to children.
- If a child places a bag over its head, it may result in suffocation.

This appliance must be properly grounded.
Do not ground the appliance to a gas pipe, plastic water pipe, or telephone line.
- This may result in electric shock, fire, an explosion, or problems with the product
- Never plug the power cord into a socket that is not grounded correctly and make sure that it is in accordance with local and national codes.

Do not install or keep the product exposed to the outdoor elements.

Do not use a damaged power plug, damaged power cord or loose wall socket.
- This may result in electric shock or fire.

If the plug (power supply cord) is damaged, it must be replaced by the manufacturer or its service agent or a similar qualified technician in order to avoid a hazard.

This appliance should be positioned to be accessible to the power plug after installation.

Do not pull or excessively bend the power cord.
Do not twist or tie the power cord.
Do not hook the power cord over a metal object, place a heavy object on the power cord, insert the power cord between objects, or push the power cord into the space behind the appliance.
- This may result in electric shock or fire.

Do not pull the power cord, when unplugging the power plug.
- Unplug the power plug by holding the plug.
- Failure to do so may result in electric shock or fire.

This appliance must be properly grounded. Never plug the power cord into a receptacle that is not grounded adequately and in accordance with local and national codes. See installation instructions for grounding this appliance.

Install this appliance in a location with solid, level floor.
- Failure to do so may result in abnormal vibrations, noise or problems with the product.

Since an ingredient in hair spray may degrade the hydrophile property of the heat exchanger so that dew may appear on the outer surface of the appliance when the cooling operation is running, do not install the appliance in a beauty salon.

DV80H4000CX-03408G-01_EN.indd Sec1:7 2014-08-20 3:19:35

WARNING SEVERE WARNING SIGNS FOR USING

Do not let children or pets on or into the product. In addition, when disposing of this product, disassemble the door lock (lever).
- This may result in children falling and injuring themselves.
- If children become locked in the product, there is a danger of suffocation.

Do not try to access the inside of the product when the drum is rotating.

Do not sit on the product or lean against the door.
- This may result in the product turning over and resulting in injury.

Dry the laundry only after it was spun by an appropriate washing machine.

Do not dry unwashed items in the tumble dryer.

Do not drink the condensed water.

Never stop a tumble dryer before the end of the drying cycle unless all items are quickly removed and spread out so that the heat is dissipated.

Do not dry laundry contaminated by inflammable materials such as gasoline, kerosene, benzene, thinner, alcohol, etc.
- This may result in electric shock, fire or explosion.

Do not let pets chew or play with the dryer.
- This may result in electric shock or injury.

When disposing of the product, separate the door and the power cord before disposing of the product.
- Failure to do so may result in damage to the power code or injury.

Do not touch the power plug with wet hands.
- This may result in electric shock.

When gas (city gas, propane gas, LP gas) leaks, do not touch this appliance or the power cord, ventilate immediately.
- At this time, do not use the ventilating fan.
- A spark may cause an explosion or fire.

Do not repair, replace, or attempt to service any part of the appliance unless specifically recommended in the user-repair instructions. You must also have the skills necessary to service this appliance.

Do not attempt to repair, disassemble, or modify the appliance yourself.
- Do not use any fuse(such as copper, steel wire, etc.) other than the standard fuse.
- When repairing or reinstalling the appliance is required, contact your nearest service center.
- Failure to do so may result in electric shock, fire, problems with the product, or injury.

The product you have purchased is designed for domestic use only.

The use for business purposes qualifies as product misuse. In this case, the product will not be covered by the standard warranty provided by Samsung and no responsibility can be attributed to Samsung for malfunctions or damages resulting from such misuse.

If the product generates strange noise, smells of something burning, or generates smoke, immediately cut-off the power and contact the service center.
- Otherwise, it may cause an electric shock or fire as a result.

DV80H4000CX-03408G-01_EN.indd Sec1:8 2014-08-20 3:19:35

CAUTION CAUTION SIGNS FOR USING

Do not stand on top of the appliance or place objects (such as laundry, lighted candles, lighted cigarettes, dishes, chemicals, metal objects, etc.) on the appliance.
- This may result in electric shock, fire, problems with the product, or injury.

Do not touch the glass door and inside of the drum during or just after drying as it is hot.
- This may result in burns.

Do not press the buttons using sharp objects such as pins, knives, fingernails, etc.
- This may result in electric shock or injury.

Do not dry laundry containing forming rubber (latex) or similar rubber textures.
- If forming rubber is heated, it may start a fire.

Do not dry laundry contaminated by vegetable oil or cooking oil as a large amount of the oil will not be removed when washing the laundry. In addition, use the Cool Down cycle so that the laundry is not heated.
- The oxidization heat of the oil may start a fire.

Make sure that the pockets of all clothing to be dried are empty.
- Hard, sharp objects, such as coins, safety pins, nails, screws, or stones can cause extensive damage to the appliance.

Do not dry clothing with large buckles, buttons, or other heavy metal (zippers, hooks and eyelets, button-up covers).
If necessary, use the laundry net for small and lightweight laundry such as fabric tie belt , apron strings, and underwire bras which can dissolve or break during a cycle.

Recommend against using drying sheets to reduce static electricity as this could lead to damage to your laundry and also potential damage to the appliance.
- This may result in damage to the laundry.

Do not use the dryer near dangerous powders such as coal dust, wheat flour, etc.
- This may result in electric shock, fire or an explosion.

Do not place inflammable materials near the product.
- This may result in toxic gases from the product, damage to parts, electric shock, fire or an explosion.
- The appliance should not be placed behind lockable doors etc.

Do not touch the rear side of the appliance during or immediately after drying is compete.
- The appliance remains hot, resulting in a burn.

DV80H4000CX-03408G-01_EN.indd Sec1:9 2014-08-20 3:19:35

⚠ WARNING SEVERE WARNING SIGNS FOR CLEANING

Do not clean the appliance by spraying water directly onto it.
Do not use benzene, thinner or alcohol to clean the appliance.

- This may result in discolouration, deformation, damage, electric shock or fire.

Before cleaning or performing maintenance, unplug the appliance from the wall socket.

- Failure to do so may result in electric shock or fire.

Clean the filter case before and after using the dryer.

Clean the inside of the product on a regular basis by asking an authorized service engineer.

Clean the condenser with water once a month.

The interior of the dryer should be cleaned periodically by qualified service personnel.

DV80H4000CX-03408G-01_EN.indd Sec1:10 2014-08-20 3:19:35

installing your dryer

UNPACKING YOUR DRYER AND INSTALLING GUIDE

Hire a professional to install this dryer properly. If there is a service call performed as a result of poor setup, adjustment, and connection, it is considered the responsibility of the installer. It is recommended that a professional is called to install this appliance, especially for more difficult installations involving draining to the mains water supply or product stacking. If problems of installation result in a service visit to fix a fault, this is typically considered to be the responsibility of the installer.

Make sure you have everything necessary for proper installation (AC 220-240 V 50 Hz).

A GROUNDED ELECTRICAL OUTLET is required. See Electrical Requirements (See page 13).

SEE DRYER EXTERIOR

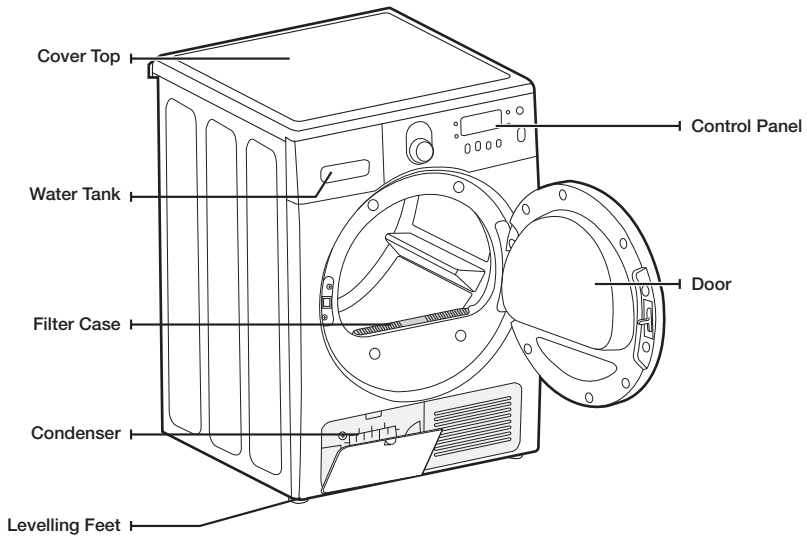

Parts



Hose guide	Cable tie	Hose connector	Long drain hose (2m)	Manual book

DV80H4000CX-03408G-01_EN.indd Sec3:11 2014-08-20 3:19:35

installing your dryer

CHECK BEFORE INSTALLING

- Do not plug the power cord into the wall outlet before completing the dryer installation.
- Check the appearance of the product for any damaged parts before starting the product installation.
- If there are any parts that appear to be damaged, please contact your nearest Samsung Customer Service Center.
- When moving the product, do not move the product by yourself.
- Take care of the edges of the dryer as they can be sharp.
- Do not install the dryer in a location exposed to frost. Cold water may damage the product.
- Use the product indoors only.
- Do not place the dryer on one side when lifting it, and do not move the dryer in such a way that the internal parts shake. This may result in damage to the internal parts of the product.

BEFORE USING THE PRODUCT

- Check if there are any accessories remaining inside the drum.
- Plug in the power cord just before operating the product.
- Do not block the air inlet hole of the cooling grill at the front of the dryer.
- Do not place inflammable objects near the dryer and keep the surroundings clean.
- Keep the dryer level with the ground.
- Do not remove the adjustable levelling feet of the dryer. They are necessary to keep the product level with the ground.

IMPORTANT TO INSTALLER

Please read the following instructions carefully before installing the dryer. These instructions should be kept for future reference.

⚠ WARNING REMOVE THE DOOR FROM ALL DISCARDED APPLIANCES TO AVOID THE DANGER OF A CHILD SUFFOCATING.

LOCATION CONSIDERATIONS

Because a condensing type has been adopted, which condenses and processes air inside the dryer, external ventilation is not required.

Therefore, The dryer can be installed and used in any location where the temperature is between 5 and 35 degrees centigrade, unlike a conventional dryer that requires an external exhaust system.

DV80H4000CX-03408G-01_EN.indd Sec3:12 2014-08-20 3:19:36

ALCOVE OR CLOSET INSTALLATION

To operate safely and properly, your new Dryer requires minimum clearances of:

Sides – 25 mm	Rear – 51 mm
Top – 25 mm	Front – 465 mm

If both the washing machine and a dryer are installed together, the front of the alcove or closet must have at least 465 mm unobstructed air opening.

ELECTRICAL REQUIREMENTS

Electrical Requirements is AC 220~240 V / 50 Hz.

WARNING

- Improper connection of the equipment grounding conductor can result in a risk of electric shock. Check with a qualified electrician or serviceman if you are in doubt as to whether your dryer is properly grounded. Do not modify the plug provided with your dryer – if it doesn't fit the outlet, have a proper outlet installed by a qualified electrician.
- To prevent unnecessary risk of fire, electrical shock, or personal injury, all wiring and grounding must be done in accordance with local codes, or in the absence of local codes, It is your responsibility to provide adequate electrical services for your dryer.

GROUNDING

Your dryer must be grounded. If your dryer malfunctions or breaks down, grounding will reduce the risk of electric shock by providing a path of least resistance for the electric current.

Your dryer comes with a power cord having a three-prong grounding plug for use in a properly installed and grounded outlet.

Never connect the ground wire to plastic plumbing lines, gas lines, or hot water pipes.

Improperly connecting the equipment-grounding conductor can result electrical shock.

Check with a qualified electrician or serviceman if you are unsure if the dryer is properly grounded. Do not modify the plug provided with the dryer. If it does not fit the outlet, have a proper outlet installed by a qualified electrician.

WARNING If the product is not grounded, there is a danger of fire or electric shock.

DV80H4000CX-03408G-01_EN.indd Sec3:13 2014-08-20 3:19:36

installing your dryer

INSTALLATION SIDE BY SIDE

For proper installation, we recommend that you hire a professional. To install:

1. Move your dryer to an appropriate location for installation. Consider installing the dryer and washer side-by-side. Lay two of the carton cushion-tops on the floor. Tip your dryer on its side so it will lay across both cushion-tops.
2. Set your dryer back in an upright position.
3. To ensure that the dryer provides optimal drying performance, it must be level. To minimize vibration, noise, and unwanted movement,the floor must be a perfectly level, solid surface.

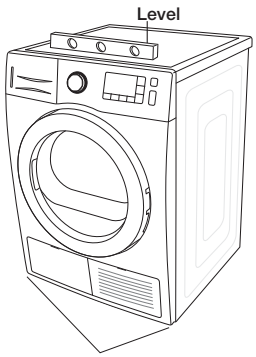

To set the dryer to the same height as the washer, fully retract the levelling feet by turning them counterclockwise, then loosen the legs by turning them clockwise.

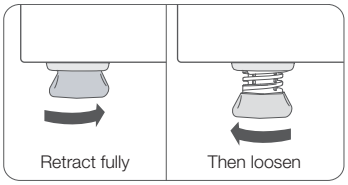

Adjust the levelling feet only as much as necessary to level the dryer. Extending the levelling feet more than necessary can cause the dryer to vibrate.

4. Review Electrical Requirements section (See page 13). BEFORE OPERATING OR TESTING.
5. With a level, check your dryer and make necessary adjustments to the levelling legs.
6. Plug in your dryer, and check operation by using the checklist below.

FINAL INSTALLATION CHECKLIST

- ☐ Dryer is plugged into electrical outlet and is properly grounded.
- ☐ Dryer is leveled and is sitting firmly on the floor.
- ☐ Start your dryer to confirm that it runs, heats, and shuts off.

DV80H4000CX-03408G-01_EN.indd Sec3:14 2014-08-20 3:19:36

DRAINING WATER WITHOUT USING THE WATER TANK

You can use the dryer without using the water tank by following the procedures below.

CONNECTING THE DRAIN HOSE

The Dryer can pump the condensed water outside of the DRYER directly with drain hose provided.
The procedures to connect the drain hose are as follows.

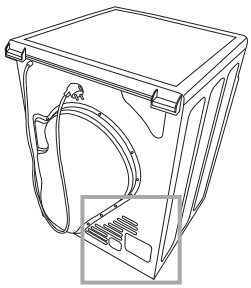

1. Disconnect the drain hose (A).

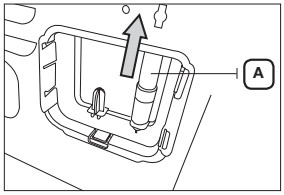

2. Connect the drain hose (A) to the other part.

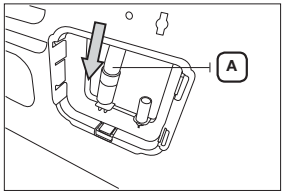

3. Connect accessory hose (long drain hose) (B) to the hole next to the part that is connected to drain hose (A).

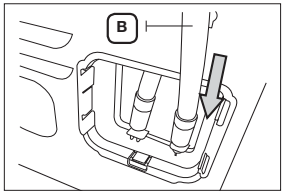

CAUTION

- Because the dryer's drain pump can only pump up the drain water to 90 cm height, when you connect the drain hose (B) to the drain point, make sure that the height of drain point does not exceed 90 cm. A drainage error may occur if the drain point exceeds 90 cm. If a drainage error occurs, the control panel displays an error code.
- After connecting the drain hose, you can directly drain the condensed water via the drain-outlet through the connected drain hose or through the washstand or the drain-outlet of the washstand.

DV80H4000CX-03408G-01_EN.indd Sec3:15 2014-08-20 3:19:36

Connecting the drain hose

The end of the drain hose can be positioned in three ways:

1. Over the edge of a wash basin: The drain hose must be placed lower than 90 cm. If the end of the drain hose needs to be placed above the ground, we recommend a height of 60 cm ~ 90 cm. To keep the drain hose spout bent, use the supplied plastic hose guide. Secure the guide to the wall with a hook or to the tap with a piece of string to prevent the drain hose from moving.

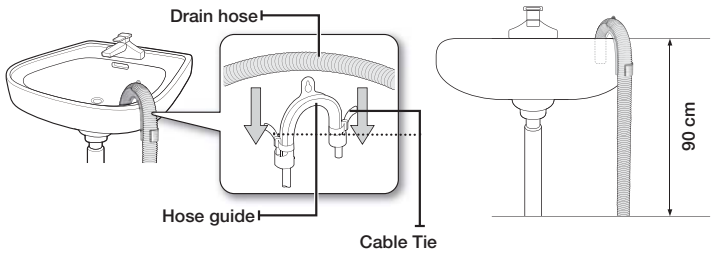

2. Assemble the drain hose and the hose guide and fix them with the cable-tie.
3. You can drain the condensed water by connecting the accessory hose (long drain hose) to the drain-outlet directly.

Connecting the direct-hose

You can immediately drain the condensed water that comes out while drying, by connecting the drain hose to the tap.

1. Assemble the hose connector and the hose.

CAUTION Since there is a danger of water leaking from the hose connecter and accessory hose, make sure that they are connected firmly.

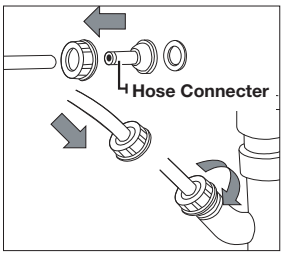

2. Connect the end of the hose to the tap.

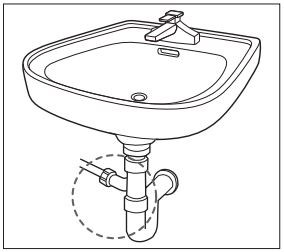

DV80H4000CX-03408G-01_EN.indd Sec3:16 2014-08-20 3:19:36

INSTALLATION STACKING

In case of purchasing the additional stacking kit, contact our Samsung service center or local distributers. [Part no. SK-DH / SK-DA / SKK-DF]
The stacking kit differs depending on the model.

1. Carefully lay the dryer on its side. Use the packing material so you don't scratch the finish on the dryer.

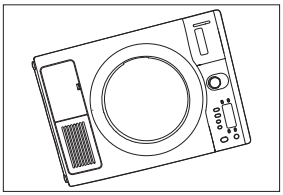

2. Install rubber pads to dryer base.

- Locate the 4 rubber pads in the parts package. Insert the rubber pads into the holes at the bottom of the levelling legs.
- Purchase the stacking-kit package additionally.

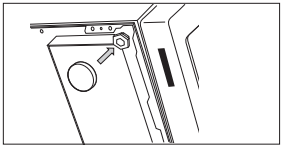

3. Set the dryer upright.

CAUTION The stacking kit can only be installed for Samsung family products.

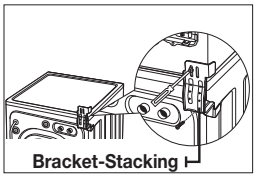

4. Install bracket to dryer.

- Remove washer top cap screw from the rear left. Align left bracket holes with top cap screw hole on rear left of the unit and replace screw.

Leave screw loose so dryer hole alignment will be easier.

- Repeat the above step with the right side.

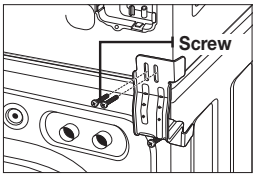

5. Install dryer and bracket on washer

WARNING

- Lift the dryer on top of the washer. Protect the washer control panel with cardboard or other protection. Be sure to lift the dryer high enough to clear the washer control panel.
- More than two people are recommended to lift the dryer into position because of its weight and size. Failure to do so could result in injury.
- Align the holes in the bracket with the holes in the back of the dryer.Using a screwdriver, attach the M4x12 tapping screws.
- Tighten the washer bracket screws ; then tighten all stacking kit screws.

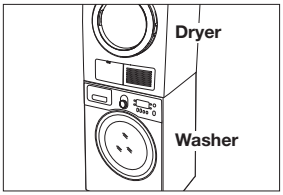

DV80H4000CX-03408G-01_EN.indd Sec3:17 2014-08-20 3:19:36

6. Finalise the installation

WARNING
- Refer to the washer Installation Instructions to complete the washer installation.
- Refer to the dryer Installation Instructions to complete the dryer installation.
- Carefully slide or walk the stacked washer and dryer into place. Use felt pads or other sliding device to assist moving and to protect flooring.

  Do not push on the dryer once installed to top of the washer. Pushing on the dryer may result in pinched fingers.

DOOR REVERSAL

Depending on your requirements (installation location, space constraints), you can change the direction the door opens.

WARNING This is done according to the customer's needs. The qualified technician or customer can do this themselves directly.

1. Unplug the power cord.
2. Remove the two screws from the door-hinge.
3. Lift the door to separate it.

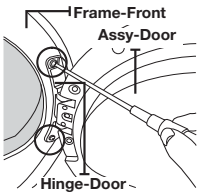

4. Remove the 16 screws.
Disassemble the air seal and remove the 6 screws.
(Only for Crystal Gloss door models)

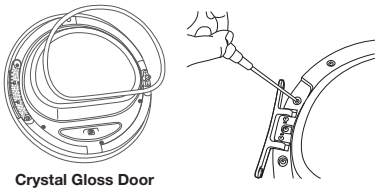

5. After removing the screw, rotate the Assy hinge door, the handle door by 180° as shown in the figure.

CAUTION
- Work carefully so that the door-seal is not removed.

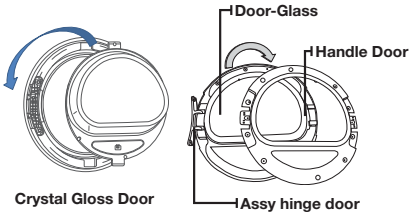

6. Fasten the 16 screws in the correct positions.
Fasten the 6 screws and replace the air seal.
(Only for Crystal Gloss door models)
7. Note that two of the screws have a different length from the others.
(Use the longer screws for the door-lever.)

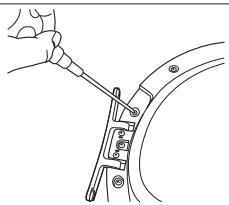

DV80H4000CX-03408G-01_EN.indd Sec3:18 2014-08-20 3:19:36

8. Move the position of the screw at the back of the door-hinge.

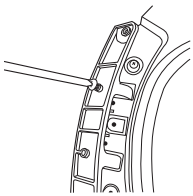

9. Fasten the screw in the bottom hole.

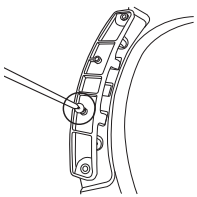

10. Remove the two screws holding the front-frame at the left.
11. Remove the two screws holding the holder-lever at the left.

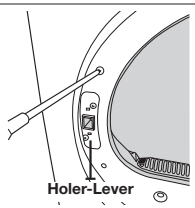

12. Now, move to the right side of the product and fasten the two screws holding the front-frame and the two screws holding the lever-holder.

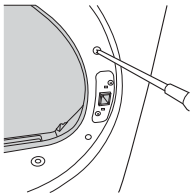

13. Align the door with the fixing holes.
14. Fasten the two screws holding the door-hinge.

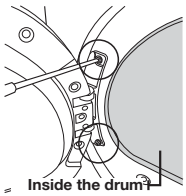

You can restore the direction the door opens by following the procedures above, if necessary.

DV80H4000CX-03408G-01_EN.indd Sec3:19 2014-08-20 3:19:37

operating Instructions, tips

WARNING To reduce the risk of fire, electric shock, or injury to persons, read the IMPORTANT SAFETY INSTRUCTIONS before operating this appliance.
If the Wrinkle Prevent option is not selected, take out the laundry immediately after it is washed and dried. Leaving the laundry inside the drum may produce wrinkles.

OVERVIEW OF THE CONTROL PANEL

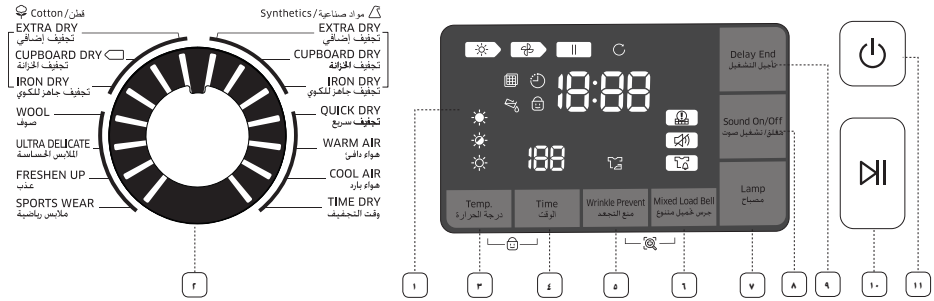

1 **Digital Graphic Display**	Displays the remaining drying cycle time, all cycle information, and error messages. The display window shows the estimated time remaining in the cycle after you have pressed the **Start/Pause** button. The estimated time remaining may fluctuates as the cycle progresses. The Drying light will illuminate and remain lit until the cycle is complete. When your dryer is in the cool-down phase, the Cooling light will illuminate. When your dryer is in the Wrinkle Prevent phase, the “Wrinkle Prevent light” will illuminate. When the cycle is complete, “End” will appear in the display panel until you push the **Start/Pause** button or the **Power** button. If your dryer is paused during a cycle, the indicators will light up until you press the **Start/Pause** button.
2 **Cycle Selector**	When you turn on your dryer, the [Cotton] CUPBOARD DRY cycle is selected as default. Turn the Cycle Selector to select the cycle you want. **Cotton** - For averagely or lightly soiled cottons, bed linen, table linen, underwear, towels, shirts, etc. • EXTRA DRY - Use for heavy-duty fabrics or items that should be very dry. • CUPBOARD DRY - Use this cycle to dry loads such as cotton, underwear, and linen (NOT appropriate for jeans). • IRON DRY - Finishes the dry cycle in a moist state appropriate for Ironing. **Synthetics** - For averagely or lightly soiled blouses, shirts, etc., made of polyester (diolen, trevira), polyamide (perlon, nylon) or other similar blends. • EXTRA DRY - Use for heavy-duty fabrics or items that should be very dry. • CUPBOARD DRY - Use this cycle to dry loads such as shirts, blouses, bed linen and table linen. (NOT appropriate for jeans). • IRON DRY - Finishes the dry cycle in a moist state appropriate for Ironing. **QUICK DRY** - 29 min is automatically set as the drying time. **WARM AIR** - For small items, pre-dried laundry and normal fabrics in 20 minutes. **COOL AIR** - For all fabrics to need freshing tumbles without heating.

DV80H4000CX-03408G-01_EN.indd Sec5:20 2014-08-20 3:19:37

2 **Cycle Selector**	**TIME DRY** - Time Dry allows you to select the desired cycle time. Turn the cycle selector dial to TIME DRY, then press **Time** Button to set the drying time. Press the **Time** button repeatedly to scroll through the time settings. The drying time increase in every 20 minutes up to 90 minutes. After drying the laundry with the normal airy dry cycle, and you feel that the laundry has not dried completely, you can extend the drying time using the TIME DRY cycle. After drying the laundry using a drying cycle, and you feel that the laundry has not dried completely, you can extend the drying time using the TIME DRY cycle. **WOOL** - For machine washable and tumble dryable wool only. For better drying results, turn the laundry inside out before drying it. Overloading the dryer may not yield the same results. For the Max Load of each drying course, refer to the Cycle Chart in the appendix. **ULTRA DELICATE** - The Delicates cycle is designed For lingeries. **FRESHEN UP** - With this cycle the odors can be removed and especially this cycle freshens garments. **SPORTS WEAR** - Use for light sportswear such as sweatsuit.
3 **Temp. button**	Press this button repeatedly to cycle through the available temperature level for the drying. (: high, : Mid., : Low)
4 **Time button**	When using TIME DRY, WARM AIR, COOL AIR cycles, time can be adjusted by pressing the **Time** button. 20 min → 30 min → 40 min → 50 min → 60 min → 70min → 80 min → 90 min Except the TIME DRY, QUICK DRY, WARM AIR, COOL AIR cycle, the time indicator of manual is off because exact drying times are determined by fluctuating humidity levels.
5 **Wrinkle Prevent button**	Wrinkle Prevent provides approximately 60 minutes of intermittent tumbling in unheated air at the end of the cycle to reduce wrinkling. Press the **Wrinkle Prevent** button to activate this feature. The indicator light above the pad will illuminate when Wrinkle Prevent is selected. Dried laundry is prevented from becoming wrinkled by periodic drum rotations after the completion of the drying course. (Even after “End” is displayed, the drum rotates intermittently.)
6 **Mixed Load Bell button**	This is an alarm that notifies the user when the average drying level is damp dry (80 % dried) when the laundry contains various types of materials and fabric. If the corresponding condition is satisfied, the Mixed load bell LED blinks
7 **Lamp button**	Lights the dryer drum while the dryer is running. It can be set while your dryer is not only running but also when it is stopped. If you do not turn the Drum Light off within 5 minutes of turning it on, it is automatically turned off.
8 **Sound On/Off button**	The Sound On/Off function can be selected during all courses. When this function is selected, sound is turned off for all courses. Even if the power is turned on and off repeatedly, the setting is retained.
9 **Delay End button**	Press this button repeatedly to cycle through the available Delay End options. (from 1 hours to 19 hours in one hour increments). The hour displayed indicates the time when the dry cycle will be finished. See page 24 for detail.

DV80H4000CX-03408G-01_EN.indd Sec5:21 2014-08-20 3:19:37

10 **Start/Pause button**	Press to start a dry cycle. If the dryer is running, press it once and it will pause the dryer. Press it again to restart the dry cycle.
11 **Power button**	Press once to turn your dryer on, press again to turn it off. If your dryer is left on for more than 10 minutes without any buttons being touched, the power automatically turns off.

If you insert laundry into your dryer while it is extremely tangled immediately after your washer has finished a wash or spin cycle, it may degrade the drying efficiency or cause the door to open. We recommend that you disentangle your laundry appropriately before inserting it.

Each indicator on the graphic display means:

	Drying in Progress		Temp. 3 (High)
	Cooling in Progress		Temp. 2 (Mid.)
	Stop		Temp. 1 (Low)
	Filter Check		Condenser Clean Alarm
	Delay End		Sound On/Off
	Dumping Condensed Water		Mixed Load Bell
	Child Lock On/Off		Smart Check

DV80H4000CX-03408G-01_EN.indd Sec5:22 2014-08-20 3:19:37

CHILD LOCK

A function to prevent children from playing with your dryer.

Activating/Deactivating

If you want to activate or deactivate the Child Lock, press both the **Temp.** and **Time** buttons simultaneously for 3 seconds.

The "**Child Lock** 🔒" will be lit when this feature is activated.

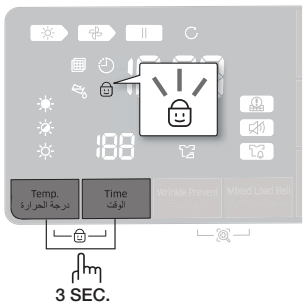

- When the power is turned on, the Child Lock function is available.
- Once you set the Child Lock function, no button, except for the **Power** button, will respond until you release the Child Lock function.
- If the dryer is powered on again, the Child Lock function stays on.
- When other buttons, except for the **Power** button, do not respond, check the Child Lock indicator to see if the function is on.

SOUND ON/OFF

The Sound On/Off function can be selected during all courses. When this function is selected, sound is turned off for all courses. Even if the power is turned on and off repeatedly, the setting is retained.

Activating/Deactivating

If you want to activate or deactivate the Sound On/Off function, press the **Sound On/Off** button.

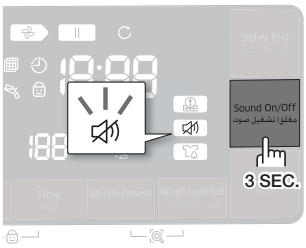

DV80H4000CX-03408G-01_EN.indd Sec5:23 2014-08-20 3:19:37

DELAY END

You can set the dryer to finish your drying cycle automatically at a later time, choosing a delay of between 1 to 19 hours (in 1 hour increments). The hour displayed indicates the time at which the dry will be finished.

The Delay End settings range from 1 hour to 19 hours, depending on the course.

1. Manually or automatically set your drying machine according to the type of laundry you are drying.
2. Press the **Delay End** button repeatedly until the required delay time is set. If the delay time is set, the "Delay End" function becomes ON state.
3. Press the **Start/Pause** button. The "Delay End" indicator will blink and the clock will begin counting down until it reaches the set time.
4. To cancel a Delay End function, press the **Power** button and then turn the dryer on again.

INTERIOR LAMP (ON SOME MODELS)

Lights the dryer drum while the dryer is running.

Setting & releasing

If you want to set or release the Interior Lamp, press both the **Lamp** buttons simultaneously.

This can be set as long as the power is turned on. If you do not turn the Drum Light off within 5 minutes of turning it on, it is automatically turned off.

DV80H4000CX-03408G-01_EN.indd Sec5:24 2014-08-20 3:19:38

SMART CHECK

This function enables you to check the status of the dryer using a smartphone.

The Smart Check function has been optimized for:
Galaxy & iPhone series (cannot be supported for some models)

Downloading the Samsung Smart Washer app

Download the Samsung Smart Washer app to your mobile phone from the Android market or Apple App store and install it. You can easily find it by searching for "**Samsung Smart Washer**".

Using the Smart Check function

1. Hold down the **Wrinkle Prevent** and **Mixed Load Bell** buttons at the same time for 3 seconds when an error occurs to run the Smart Check function. Alternatively, the Smart Check function can be run if no button is pressed after the dryer is turned on.
2. The LED segments on the display panel rotate for 2 or 3 seconds and the Smart Check code is displayed on the dryer's display panel.

3. Run the **Samsung Smart Washer** app on your smart phone and tap the **Smart Check** button.

'Smart Check' may be changed to 'Smart Care' according to the language selection.

4. Focus your smart phone's camera on the Smart Check code displayed on the dryer's display panel.

- If light from a light bulb, fluorescent bulb or lamp is reflected on the display panel of the dryer, the smart phone may not be able to easily recognize the Smart Check code.
- If you hold the smart phone at a too wide angle relative to the front of the display panel, it may not be able to recognize the error code. For best results, hold the smart phone so that the front of the display panel and the smart phone are parallel or nearly parallel.

5. If it focuses correctly, the Smart Check code is automatically recognized, and the detailed information of the status of your dryer, the error and the countermeasures are displayed on your smart phone.
6. If the smart phone fails to recognize the Smart Check code more than twice, please enter the Smart Check code displayed on your dryer's display panel into the Samsung Smart Washer app manually.

DV80H4000CX-03408G-01_EN.indd Sec5:25 2014-08-20 3:19:38

RACK DRY (ON SOME MODELS)

Installing the drying rack

1. Open the dryer door.
2. Position the drying rack in the tumbler, placing the front lip of the drying rack on the top of the lint filter case.
3. Place the items to be dried on the rack, leaving space between them so air can circulate.
4. Close the dryer door.
5. Press the **Power** button.
6. Select TIME DRY by using the cycle selector dial, set the time and then press the **Rack Dry** button.

- You can set a drying time up to 90 minutes. The temperature setting is automatically set to Low and cannot be changed. Select the time according to the moisture and weight of the items. Start dryer. It may be necessary to reset the timer if a longer drying time is needed.
- If do not select TIME DRY cycle, Rack Dry function is not selected.

7. Press the **Start/Pause** button.

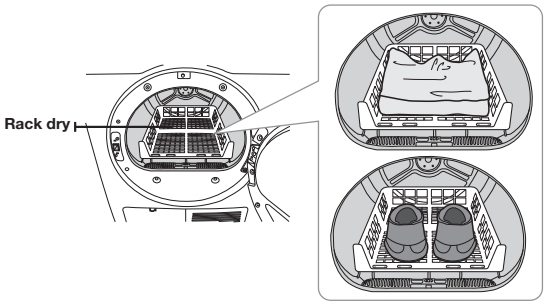

SUGGESTED ITEMS	REMARKS (MAX 1.5 kg)
Washable sweaters (block to shape and lay flat on rack)	When drying the laundry using the Rack, fold and place the clothes on the Rack to prevent the clothing from becoming wrinkled.
Stuffed toys (cotton or polyester fiberfilled)	
Stuffed toys (foam or rubber-filled)	
Foam rubber pillows	
Sneakers	To dry sports shoes, place the shoes on the Rack so that the soles of the shoes are facing downwards.

WARNING Drying foam rubber, plastic, or rubber on a heat setting may cause damage to the items and lead to a fire hazard.

CAUTION Since damage may result when drying shoes, use the Rack Dry course to dry shoes.

DV80H4000CX-03408G-01_EN.indd Sec5:26 2014-08-20 3:19:38

LOAD THE DRYER PROPERLY

- Place only one washload in your dryer at a time.
- Mixed loads of heavy and lightweight fabrics will dry differently, which may result in lightweight fabrics being dry while heavy fabrics remain damp at the end of a drying cycle.
- Add one or more similar items to your dryer when only one or two articles of clothing need drying. This improves the tumbling action and drying efficiency.
- Overloading restricts tumbling action, resulting in uneven drying as well as excessive wrinkling of some fabrics.
- Make sure to insert laundry that has been spun by an appropriate washing machine.
- No unwashed textiles should be dried
- Textiles which have been in contact with oil, alcohol, petrol etc. should not be dried.

GETTING STARTED

1. Load your dryer loosely – DO NOT overload.
2. Close the door.
3. Select the appropriate cycle and options for the load (see pages 23, 25).
4. Press the **Start/Pause** button.
5. The dryer indicator light will illuminate.
6. The estimated cycle time will appear in the display.
   The time may fluctuate to better indicate drying time remaining in the cycle.

- When the cycle is complete and “End” will appear in the display.
- Pressing Power cancels the cycle and stops your dryer.
- The Drying, Cooling, and Wrinkle Prevent indicator lights will illuminate during those portions of the cycle.

DV80H4000CX-03408G-01_EN.indd Sec5:27 2014-08-20 3:19:38

care and cleaning

CLEAN THE FILTER CASE

- After each load.
- To shorten drying time.
- To operate more energy efficiently.

Do not operate your dryer without the filter case in place.

CAUTION There is a danger of damaging the laundry when drying laundry without the filter case.

CLEAN THE CONDENSER

- Clean once a month
- Clean with water

CAUTION If you do not clean it for a long time, the drying performance may be degraded.

CONTROL PANEL

Clean with a soft, damp clothes. Do not use abrasive substances.
Do not spray cleaners directly on the panel.
The control panel finish may be damaged by some laundry pre-treatment soil and stain remover products.
Apply such products away from your dryer and wipe up any spills or overspray immediately.

TUMBLER

Remove any stains such as crayon, ink, or fabric dye (from new items such as towels or jeans) with an all-purpose cleaner.
Tumble old towels or rags to remove any excess stain or cleaning substance.
Once these steps are followed, stains may still be visible, but should not transfer to subsequent loads.

STAINLESS STEEL TUMBLER

To clean the stainless steel tumbler, use a damp cloth with a mild, non-abrasive cleaner suitable for stainless steel surfaces.
Remove the cleaner residue and dry with a clean cloth.

DRYER EXTERIOR

The entire dryer has a high-gloss finish. Clean with a soft, damp cloth. Do not use abrasive substances.
Protect the surface from sharp objects as they may scratch or damage the finish.
Do not place any heavy or sharp objects or a detergent box on the dryer. Keep them on the purchased pedestal or in a separate storage box.

DV80H4000CX-03408G-01_EN.indd Sec10:28 2014-08-20 3:19:38

DUMPING CONDENSED WATER ( )

1. Pull the water-tank forwards to separate it.

CAUTION When removing the water tank from the product, hold the water tank using both hands as it is heavy and take care not to spill any water inside the tank. Otherwise, it may cause an injury to your wrist.

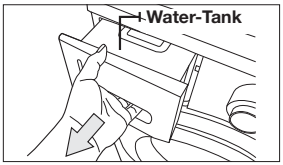

2. Remove the condensed water inside the water-tank.

- Remove the condensed water in the tank after every drying operation.

WARNING Since there is a danger of water leaking if you do not drain the water after using the product, make sure to drain the water.

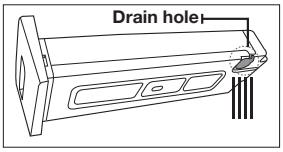

If you empty the water tank and press the **Start/Pause** button, the Water Tank Full ( ) in the LED panel is turned off.

CLEANING THE FILTER CASE ( )

1. Open the door and remove the filter by pulling it upwards.

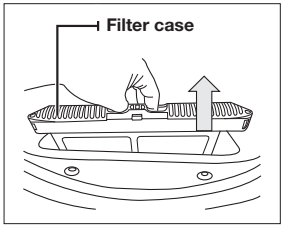

2. Open and clean the filter case.

- Clean the filter case after the drying operation is completed.

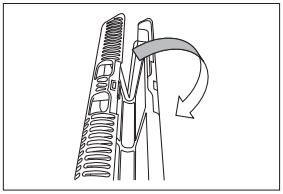

CAUTION
- Since the drying performance may be degraded and there is a danger of fire if you do not clean the filter case after the specified period of use, clean the filter case at the specified cleaning interval.
- Since the drying performance may be degraded and there is a danger of fire if you use a damaged or broken filter case, replace the filter case in this case.
- Clean the filter case after every drying operation.

- If the surface of the filter is wet, use the filter after drying it completely.
- If you clean the filter case and press the **Start/Pause** button, the Filter ( ) in the LED panel is turned off.

DV80H4000CX-03408G-01_EN.indd Sec10:29 2014-08-20 3:19:38

CLEANING THE CONDENSER ASSEMBLY

1. Open the condenser compartment cover.

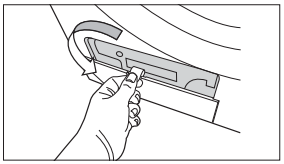

2. Unlock the fixer condenser.

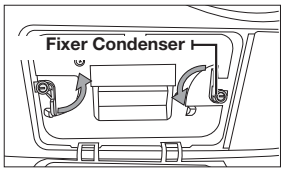

3. Remove the condenser.

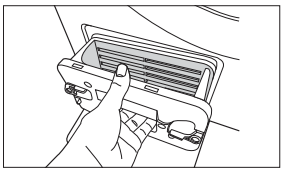

4. Clean the condenser completely under the tap letting water to flow through.

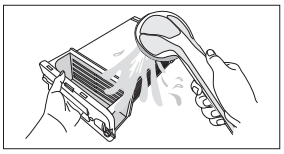

CAUTION

- Since the drying performance may be degraded if you do not clean the condenser after a specified period of use, clean the condenser at the specified cleaning interval.
- Clean it at least once a month.
- When assembling the condenser after cleaning it, make sure to that the fixer condenser is set to the lock position.

DV80H4000CX-03408G-01_EN.indd Sec10:30 2014-08-20 3:19:39

SPECIAL LAUNDRY TIPS

Please follow the care label or manufacturer's instructions for drying special items. If care label instructions are not available, use the following information as a guide.

Bedspreads & Comforters	• Follow the care label instructions or dry on the **Cotton** (CUPBOARD DRY ⬭) and High temperature. • Make sure the item is thoroughly dry before using or storing. • May require repositioning to ensure even drying.
Blankets	• Use **Cotton** (CUPBOARD DRY ⬭) and dry only one blanket at a time for best tumbling action. • Make sure the item is thoroughly dry before using or storing.
Cloth Nappies	• Use the **Cotton** (CUPBOARD DRY ⬭) and the High temperature settings for soft,fluffy diapers.
Down–filled Items (jackets, sleeping bags, comforters, etc.)	• Use the **Cotton** (CUPBOARD DRY ⬭) and the Low or Low temperature setting. • Adding a couple of dry towels shortens drying time and absorbs moisture.
Foam Rubber (rug backs, stuffed toys, shoulder pads, etc.)	• DO NOT dry on a heat setting. Use the **COOL AIR** cycle (no heat). • WARNING – Drying a rubber item with heat may damage it or be a fire hazard.
Pillows	• Use the **Cotton** (CUPBOARD DRY ⬭). • Add a couple of dry towels to help the tumbling action and to fluff the item. • DO NOT dry kapok or foam pillows in dryer. Use the **COOL AIR** cycle.
Plastics (shower curtains, outdoor furniture covers, etc.)	• Use the **COOL AIR** cycle or the **TIME DRY** cycle and the Low or Low temperature settings depending on the care label instructions.

THINGS TO AVOID :

- Fiberglass items (curtains, draperies, etc.).
- Woolens, unless recommended on the label.
- Vegetable or cooking oil-soaked items.

DV80H4000CX-03408G-01_EN.indd Sec8:31 2014-08-20 3:19:39

troubleshooting

CHECK THESE POINTS IF YOUR DRYER...

PROBLEM	SOLUTION
Doesn't run.	• Make sure the door is latched shut. • Be sure the power cord is plugged into a live electrical outlet. • Check the home's circuit breaker and fuses. • Press the Start/Pause button again if the door is opened during the cycle. • Empty the water in the condensed water tank. • Clean the filter case.
Doesn't heat.	• Check the home's circuit breaker and fuses. • Select a heat setting other than cool air. • Check the case filter and condenser and clean them if necessary. • Dryer may have moved into the cool-down phase of the cycle.
Doesn't dry.	• Check all of the above, plus... • Do not overload. 1 wash load = 1 dryer load. • Sort heavy items from lightweight items. • Large, bulky items like blankets or comforters may require repositioning to ensure even drying. • Check that the dryer is draining properly to extract adequate water from the load. • Load may be too small to tumble properly. Add a few towels. • Clean the filter case. • Clean the Condenser. • Check if the cooling air vent is blocked.
Is noisy.	• Check the load for objects such as coins, loose buttons, nails, etc. Remove promptly. • Be sure the dryer is leveled properly as outlined in the installation instruction. • It is normal for the dryer to hum due to the high velocity of air moving through the dryer drum and fan.
Dries unevenly.	• Seams, pockets, and other similarly heavy areas may not be completely dry when the rest of the load has reached the selected dryness level. This is normal. Select the extra dry setting if desired. • If one heavy item is dried with a lightweight load, such as one towel with sheets, it is possible that the heavy item will not be completely dry when the rest of the load has reached the selected dryness level. Sort heavy items from lightweight items for best drying results.
Has an odour.	• Household odors from painting, varnishing, strong cleaners, etc. may enter the dryer with the surrounding room air. This is normal as the dryer draws the air from the room, heats it, pulls it through the tumbler, and exhausts it outside. • When these odors linger in the air, ventilate the room completely before using the dryer.
Shuts off before load is dry	• Dryer load is too small. Add more items or a few towels and restart the cycle. • Dryer load is too large. Remove some items and restart the dryer.

DV80H4000CX-03408G-01_EN.indd Sec6:32 2014-08-20 3:19:39

PROBLEM	SOLUTION
Lint on clothes	• Make sure the lint filter is cleaned before every load. With some loads that produce high amounts of lint, it may be necessary to clean the filter case during the cycle. • Some fabrics are lint producers (for example, a fuzzy white cotton towel) and they should be dried separately from clothes that are lint trappers (for example, a pair of black linen pants) • Divide larger loads into smaller loads for drying • Check pockets thoroughly before drying and drying clothes.
Garments still wrinkled after Wrinkle prevent	• Small loads of 1 to 4 items work best. • Load fewer garments.Load similar-type garments.
Odours remain in clothing after Refresh.	• Fabrics containing strong odors should be washed.

DV80H4000CX-03408G-01_EN.indd Sec6:33 2014-08-20 3:19:39

troubleshooting

INFORMATION CODES

Information codes may be displayed to help you better understand what is occurring with your Dryer.

ERROR DISPLAY	MEANING	SOLUTION
tE	Clogged filter case is restricted.	Clean the filter case or condenser. If the problem continues call for service.
tE5		
dE	Running the dryer with door open	Close the door and then restart. If the problem continues call for service.
bE	Button stuck for more than 30 secs	Make sure a button is NOT being pressedcontinuously. Try restarting the cycle. If the problem continues, call for service.
hE	Clogged filter case is restricted. Invalid heating Temp when running the dryer.	Clean the filter case or condenser. If the problem continues call for service
5E	The water tank is full of water. The drain pump is out of order.	Empty the water tank and start again. If the problem continues call for service.

For any codes not listed above, or if the suggested solution doesn't fix the problem, call your Samsung Service Centre or local Samsung dealer.

DV80H4000CX-03408G-01_EN.indd Sec6:34 2014-08-20 3:19:39

FABRIC CARE CHART

The following symbols provide garment care direction. The Clothing care labels include symbols for drying, bleaching, drying and ironing, or dry cleaning when necessary. The use of symbols ensures consistency among garment manufacturers of domestic and imported items. Follow care label directions to maximize garment life and reduce laundering problems.

Wash Cycle		**Special Instructions**		**Warning Symbols for Laundering**	
	Normal		Line Dry/ Hang to Dry		Do Not Wash
	Permanent Press / Wrinkle Resistant / Wrinkle Control		Drip Dry		Do Not Wring
	Gentle/Delicates		Dry Flat		Do Not Bleach
	Hand Wash	**Heat Setting**			Do Not Tumble Dry
Water Temperature**			High		No Steam (added to iron)
●●●	Hot		Medium		Do Not Iron
●●	Warm		Low	**Dryclean**	
●	Cold		Any Heat		Dry Clean
Bleach			No Heat/Air		Do Not Dry Clean
	Any Bleach (when needed)	**Iron-Dry or Steam Temperatures**			Line Dry/ Hang to Dry
	Only Non-Chlorine (color-safe) Bleach (when needed)		High		Drip Dry
	Tumble Dry Cycle		Medium		Dry Flat
Normal			Low		
	Permanent Press/ Wrinkle Resistant/ Wrinkle Control				
	Gentle/ Delicates				

** The dot symbols represent appropriate wash water temperatures for various items. The temperature range for Hot is 41 ~ 52 °C, for Warm 29 ~ 41 °C and for Cold 16 ~ 29 °C. (Wash water temperature must be a minimum of 16 °C for detergent activation and effective cleaning.)

DV80H4000CX-03408G-01_EN.indd Sec4:35 2014-08-20 3:19:39

appendix

PROTECTING THE ENVIRONMENT

This appliance is manufactured from recyclable materials. If you decide to dispose of this appliance, please observe local waste disposal regulations. Cut off the power cord so that the appliance cannot be connected to a power source. Remove the door so that animals and small children cannot get trapped inside the appliance.

DECLARATION OF CONFORMITY

This appliance complies with European safety standards, EC directive 93/68 and EN Standard 60335.

SPECIFICATIONS

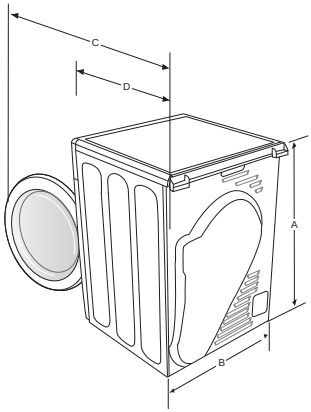

TYPE		FRONT LOADING DRYER
DIMENSIONS	**A. Height**	85.0 cm
	B. Width	60.0 cm
	C. Depth with door open 90°	110.9 cm
	D. Depth	60.0 cm
WEIGHT		42 kg
HEATER RATING		2500 W (1750 W+750 W)
POWER CONSUMPTION	**NO HEAT**	175 W
	HEATING	2675 W
ALLO WABLE TEMPERATURE		5 ~ 35 °C

The energy label specifications have been determined by using the following program according to UAE.S 5010 2:2013.

- The program is “Cotton Cupboard, Temp High with Anti Crease off”.

DV80H4000CX-03408G-01_EN.indd Sec4:36 2014-08-20 3:19:39

CYCLE CHART

(● user option)

Cycle		Max load (kg) (Dry Laundry)	Temp	Wrinkle Prevent	Mixed Load Bell	Interior Lamp	Sound On/ Off	Delay End
Cotton	EXTRA DRY	8	●	●	●	●	●	●
	CUPBOARD DRY		●	●	●	●	●	●
	IRON DRY		●	●	-	●	●	●
Synthetics	EXTRA DRY	4	●	●	●	●	●	●
	CUPBOARD DRY		●	●	●	●	●	●
	IRON DRY		●	●	-	●	●	●
WOOL *		1	-	●	-	●	●	●
ULTRA DELICATE		1	-	●	●	●	●	●
FRESHEN UP		1.5	-	●	-	●	●	●
SPORTS WEAR		1.5	-	●	●	●	●	●
QUICK DRY		1	-	●	-	●	●	●
TIME DRY		-	●	●	-	●	●	●
WARM AIR		-	-	●	-	●	●	●
COOL AIR		-	-	●	-	●	●	●

***** Depending on the percentage of wool in the laundry, the time may extend up to 43 minutes.

CONSUMPTION DATA

Model	Program	Load (kg)*	Energy (kWh)	Max. Duration (Minutes)
DV8 Series	Cotton Cupboard **	8	4.70	145
		4	2.57	84
	Cotton Iron **	8	4.53	105
	Synthetics Cupboard	4	2.32	70

1. * : Weight of dry laundry
** : EN 61121:2013 test program

2. All data without a “star” against it was calculated using EN 61121:2013

Consumption data can vary from the nominal values given above depending in the size of the load, types of textiles, residual moisture levels after spinning, fluctuations in the electricity supply and any extra options selected.

DV80H4000CX-03408G-01_EN.indd Sec4:37 2014-08-20 3:19:39

note

note

QUESTIONS OR COMMENTS?

Country	CALL	OR VISIT US ONLINE AT
U.A.E	800-SAMSUNG (800 - 726 7864)	www.samsung.com/ae/support (English) www.samsung.com/ae_ar/support (Arabic)

DC68-03408G-01

سلسلة DV8

المجفف بالتكثيف
دليل المستخدم

Planet First 100% Recycled Paper

تم إنتاج هذا الدليل باستخدام ورق معاد تدويره بنسبة ١٠٠ ٪.

إمكانات هائلة

نشكرك على شراء هذا المنتج من Samsung.

SAMSUNG

DC68-03408G-01

DV80H4000CX-03408G-01_AR.indd 1 2014-08-21 12:24:46

المحتويات

معلومات السلامة ٤

٤ ما يجب أن تعرفه حول إرشادات السلامة
٤ الرموز والاحتياطات المهمة للمحافظة على السلامة

تركيب المجفف ١١

١١ إخراج المجفف من صندوق التعبئة ودليل التركيب
١١ نظرة حول السطح الخارجي للمجفف
١٢ الفحص قبل التركيب
١٢ إجراءات ما قبل استخدام المنتج
١٢ تعليمات مهمة للتركيب
١٢ الاعتبارات المكانية
١٣ تركيب القنطرة أو الخزانة
١٣ المتطلبات الكهربية
١٣ التوصيل الأرضي
١٤ التركيب جانب بجانب
١٤ قائمة الفحص النهائية للتركيب
١٥ تصريف الماء بدون استخدام خزان الماء
١٥ توصيل خرطوم التصريف
١٧ أدوات التركيب
١٨ عكس اتجاه دوران الباب

إرشادات التشغيل والنصائح المساعدة ٢٠

٢٠ شكل لوحة التحكم
٢٣ التأمين ضد عبث الأطفال
٢٣ مغلق/تشغيل صوت
٢٤ تأجيل التشغيل
٢٤ مصباح داخلي (في بعض الطُرز)
٢٥ الفحص الذكي
٢٦ رف التجفيف (في بعض الطُرز)
٢٧ ملء حمولة المجفف بطريقة صحيحة
٢٧ بدء العمل

العناية والنظافة ٢٨

٢٨ نظّف حاوية المصفاة
٢٨ تنظيف المكثف
٢٨ لوحة التحكم
٢٨ البرميل الدوار
٢٨ حاوية دوارة من الفولاذ غير القابل للصدأ
٢٨ السطح الخارجي للمجفف
٢٩ تفريغ الماء المتكثف ( )
٢٩ تنظيف حاوية المصفاة ( )
٣٠ تنظيف مكونات المكثف

DV80H4000CX-03408G-01_AR.indd Sec9:2 2014-08-21 12:24:55

النصائح الخاصة بالغسيل ٣١

٣١ النصائح الخاصة بالغسيل

استكشاف المشاكل وحلها ٣٢

٣٢ تحقق مما يلي إذا كان الجفف...

٣٤ رموز المعلومات

الملحق ٣٥

٣٥ جدول العناية بالأقمشة

٣٦ حماية البيئة

٣٦ بيان التوافق

٣٦ المواصفات

٣٧ جدول الدورات

٣٧ بيانات الاستهلاك

DV80H4000CX-03408G-01_AR.indd Sec9:3 2014-08-21 12:24:55

معلومات السلامة

تهانينا على شرائك مجفف Samsung الجديد. يحتوى هذا الدليل على معلومات مهمة حول عملية تركيب الجهاز واستخدامه والعناية به. الرجاء قراءة هذا الدليل بعناية لتتمكن من الاستفادة الكاملة من الميزات والفوائد العديدة للمجفف.

تحذير - خطر نشوب حريق

- يجب إجراء أعمال تركيب مجفف الملابس من خلال فني مؤهل.
- قم بتركيب مجفف الملابس وفقًا لإرشادات الشركة المصنِّعة والقوانين المحلية.
- لتقليل خطر حدوث إصابة بالغة أو الوفاة، اتبع جميع إرشادات التركيب.

ما يجب أن تعرفه حول إرشادات السلامة

لا تغطي التحذيرات وإرشادات السلامة المهمة الواردة في هذا الدليل جميع الظروف والمواقف المحتمل حدوثها. لذا، يقع على عاتقك مسؤولية اتباع المنطق السليم والتعامل بحذر ومراعاة الانتباه عند تركيب المجفف أو صيانته أو تشغيله.

اتصل دائمًا بالشركة المصنِّعة للجهاز للاستفسار حول المشاكل والظروف التي لا تستوعبها.

الرموز والاحتياطات المهمة للمحافظة على السلامة

تحذير	المخاطر أو الممارسات غير الآمنة التي قد تؤدي إلى **إصابات جسدية بالغة أو الوفاة**.
تنبيه	المخاطر أو الممارسات غير الآمنة التي قد تؤدي إلى **إصابات طفيفة للأفراد أو تلف في الممتلكات**.
تنبيه	لتقليل احتمالات نشوب حريق أو حدوث انفجار أو التعرض لصدمة كهربية أو إصابة جسدية أثناء استخدام المجفف، اتبع احتياطات السلامة الأساسية التالية:

	ممنوع المحاولة.
	ممنوع الفك.
	ممنوع اللمس.
	اتبع الإرشادات بعناية.
	افصل قابس التيار الكهربي من مقبس الحائط.
	تأكد من توصيل الغسالة بطرف أرضي لمنع التعرض لصدمة كهربية.
	اتصل بمركز الخدمة للمساعدة.
	ملاحظة
	اقرأ دليل المشغل

تهدف رموز التحذير الموضحة هنا إلى منع حدوث إصابات لك وللآخرين. لذا، الرجاء اتباعها بعناية.
وبعد قراءة هذا الدليل، احتفظ به في مكان آمن للرجوع إليه في المستقبل.
اقرأ جميع الإرشادات أولاً قبل استخدام الجهاز.

DV80H4000CX-03408G-01_AR.indd Sec1:4 2014-08-21 12:24:55

⚠ تحذير: لتقليل احتمالات نشوب حريق أو التعرض لصدمة كهربية أو حدوث إصابات جسدية أثناء استخدام الجهاز، اتبع احتياطات السلامة الأساسية التالية:

لا تدع الأطفال (أو الحيوانات الأليفة) يلعبون داخل الغسالة أو فوقها. حيث إنه لا يمكن فتح باب الغسالة بسهولة من الداخل. وقد يصاب الأطفال بإصابات بالغة الخطورة في حالة احتباسهم بداخلها.

يجب عدم استخدام هذا الجهاز من قبل ذوي الإعاقات البدنية أو الحسية أو العقلية أو من تنقصهم المعرفة والخبرة (بما في ذلك الأطفال)، إلا إذا كانوا تحت إشراف شخص يوفر لهم إرشادات استخدام الجهاز ويكون مسؤولاً عن سلامتهم.

تجب مراقبة الأطفال لضمان عدم عبثهم بالجهاز.

بالنسبة للاستخدام في أوروبا: يمكن أن يستخدم هذا الجهاز الأطفال الذين تبدأ أعمارهم من ٨ سنوات فأكثر، بالإضافة إلى الأشخاص الذين يعانون من ضعف في قدراتهم العضلية أو الحسية أو العقلية أو أولئك الذين تنقصهم المعرّفة والخبرة إذا كانوا تحت الإشراف وعلى دراية بالإرشادات التي تتعلق باستخدام الجهاز بطريقة آمنة وفهم المخاطر المتضمنة في عملية الاستخدام.

ويجب عدم السماح للأطفال باللعب بالجهاز، كما يجب عدم السماح للأطفال بالتنظيف أو الصيانة التي يقوم بها المستخدم دون إشراف.

في حالة تلف سلك التيار الكهربائي، يجب تغييره من قبل الشركة المصنِّعة أو وكيل الصيانة الخاص بها أو أي فني مؤهل لتجنب التعرض لأي خطر.

يجب وضع الجهاز بحيث يسهل الوصول إلى قابس التيار الكهربائي وصنابير التزويد بالماء وأنابيب صرف الماء.

بالنسبة للأجهزة التي تحتوي على فتحات تهوية بقاعدتها، يجب تجنب سد السجاد لهذه الفتحات.

يجب استخدام مجموعة الخرطوم المرفقة بالغسالة ولا تعيد استخدام مجموعة الخرطوم القديمة.

تنبيه: لتجنب حدوث خطر بسبب إعادة الضبط غير المقصود للقاطع الحراري، يجب ألا يتم تزويد هذا الجهاز بالطاقة من خلال جهاز فصل ووصل خارجي -مثل المؤقت- أو توصيله بدائرة كهربائية يتم تشغيلها وإيقاف تشغيلها بصورة منتظمة بواسطة مرفق الخدمة العامة.

لا تستخدم المجفف بالتدوير إذا تم استخدام مواد كيميائية صناعية عند التنظيف.

لابد من تنظيف مصيدة الوبر بشكل متكرر، إن وجدت.

يجب عدم ترك الوبر يتراكم حول المجفف بالتدوير. (لا ينطبق على الأجهزة التي يتم تهويتها من خلال السطح الخارجي للمبنى)

DV80H4000CX-03408G-01_AR.indd Sec1:5 2014-08-21 12:24:56

معلومات السلامة

لابد من توفير التهوية الكافية لتجنب عودة تدفق الغازات إلى الغرفة من الأجهزة التي تحرق أنواع الوقود الأخرى، بما في ذلك النيران المشعلة.

لا تقم بتجفيف العناصر غير المغسولة في المجفف بالتدوير.

يجب غسل العناصر المتسخة بمواد مثل زيت الطهي، والأسيتون، والكحول، والبنزين، والكيروسين، ومزيلات البقع، وزيت التربنتين، والشمع ومزيلات الشمع فى الماء الساخن مع كمية إضافية من المسحوق قبل أن تجفف في المجفف بالتدوير.

لا تقم بتجفيف عناصر مثل المطاط الاسفنجي (الرغوة المطاطية)، وقبعات الاستحمام، والمنسوجات المقاومة للماء، والمواد والملابس التي تحتوي على المطاط أو الوسائد المزودة ببطانة اسفنجية في المجفف بالتدوير.

يجب استخدام منعمات الأقمشة، أو المنتجات المماثلة، على النحو المحدد في ارشادات منعّم الأقمشة.

لا يحتوي الجزء الأخير من دورة المجفف بالتدوير على الحرارة (دورة تبريد) لضمان أن هذه العناصر متروكة في درجة حرارة تضمن عدم إتلافها.

قم بإزالة كافة الأشياء من الجيوب مثل الولاعات وأعواد الثقاب.

تحذير: لا توقف مطلقًا المجفف بالتدوير قبل نهاية دورة التجفيف ما لم يتم إزالة كافة العناصر سريعًا ونشرها بحيث يتم تبدد الحرارة.

يجب عدم تصريف الهواء العادم من خلال مداخن تستخدم لتصريف أبخرة من أجهزة احتراق الغاز أو أنواع الوقود الأخرى.

يجب أن لا يتم تركيب الجهاز خلف باب قابل للقفل، أو باب جرار، أو باب ذو مفصل على الجانب المقابل لتلك التي في المجفف، فبهذه الطريقة لن تستطيع فتح باب المجفف بالكامل.

يجب عدم اقتراب الأطفال الأقل من ٣ سنوات أو مراقبتهم دون انقطاع في حال اقترابهم.

DV80H4000CX-03408G-01_AR.indd Sec1:6 2014-08-21 12:24:56

علامات التحذير الصارمة المتعلقة بالتركيب

تنبيه

يجب تركيب هذا الجهاز بواسطة فني مؤهل أو شركة صيانة متخصصة.
- قد ينتج عن الفشل في اتباع هذه التعليمات حدوث صدمة كهربية أو نشوب حريق أو انفجار أو مشاكل تتعلق بالمنتج أو التعرض للإصابة.

وصّل سلك التيار الكهربي بمأخذ حائط بتيار متردد بجهد ٢٢٠ إلى ٢٤٠ فولت/٥٠ هرتز أو أعلى من ذلك. ولا تستخدم هذا المأخذ إلا لتشغيل هذا الجهاز فقط. بالإضافة إلى ذلك، يجب عدم استخدام سلك تمديد.
- قد تؤدي مشاركة مقبس الحائط مع أجهزة أخرى باستخدام مشترك كهرباء أو مد سلك التيار الكهربي إلى حدوث صدمة كهربية أو نشوب حريق.
- تأكد من تطابق كل من الجهد الكهربي والتردد والتيار مع القياسات الخاصة بمواصفات المنتج. فقد يؤدي عدم الالتزام بذلك إلى التعرض لصدمة كهربية أو نشوب حريق. لذا، يجب التأكد من توصيل قابس التيار الكهربي بمقبس الحائط بإحكام.

أزل أي مواد غريبة، مثل الأتربة أو الماء من أطراف قابس التيار الكهربي ونقاط الاتصال باستخدام قطعة قماش جافة بانتظام.
- افصل قابس التيار الكهربي ونظفه باستخدام قطعة قماش جافة.
- فقد يؤدي عدم الالتزام بذلك إلى التعرض لصدمة كهربية أو نشوب حريق.

اجعل جميع مواد التعبئة والتغليف بعيدة تمامًا عن متناول الأطفال، نظرًا لأنها قد تمثل خطرًا عليهم.
- قد يؤدي وضع الطفل لكيس من أكياس التغليف فوق رأسه إلى إصابته بالاختناق.

يجب توصيل الجهاز بطرف أرضي بشكل سليم.
لا تقم بتوصيل الجهاز بطرف أرضي بالقرب من أنبوب غاز أو أنبوب مياه بلاستيكي أو سلك تليفون.
- قد ينتج عن هذا الأمر حدوث صدمة كهربية أو نشوب حريق أو انفجار أو مشاكل بالمنتج
- لا تقم بتوصيل سلك التيار الكهربي بمأخذ لم يتم توصيله بأرضي بشكل صحيح. وتأكد من أن ذلك يتم وفقًا للقواعد المحلية والقومية.

لا تقم بتركيب الجهاز أو حفظه بطريقة تعرضه للعوامل الخارجية.

لا تستخدم قابس تيار كهربي أو سلك تيار كهربي تالفًا أو مقبس حائط غير مُحكم.
- قد ينتج عن هذا الأمر حدوث صدمة كهربية أو نشوب حريق.

في حالة تلف قابس الجهاز (سلك التيار الكهربي)، يجب تغييره من قبل الشركة المصنّعة أو وكيل الصيانة الخاص بها أو أي فني مؤهل لتجنب التعرض لأي خطر.

ينبغي وضع الجهاز في مكانٍ مناسب ليسهل وصول قابس التيار الكهربي إليه بعد التركيب.

لا تجذب سلك التيار الكهربي أو تثنيه بقوة.
لا تقم بلفه أو طيه.
ولا تعلقه فوق شيء معدني أو تضع شيئًا ثقيلاً فوقه أو تمرره بين أشياء أو تدفعه في المساحة الموجودة خلف الجهاز.
- قد ينتج عن هذا الأمر حدوث صدمة كهربية أو نشوب حريق.

لا تجذب سلك التيار الكهربي عند فصل قابس التيار الكهربي.
- افصل قابس التيار الكهربي عن طريق سحب القابس.
- فقد يؤدي عدم الالتزام بذلك إلى التعرض لصدمة كهربية أو نشوب حريق.

يجب توصيل الجهاز بالأرضي بشكل سليم. ولا توصل سلك التيار الكهربي مطلقًا بمقبس متصل بأرضي بشكل غير ملائم وغير متطابق مع القواعد المحلية والقومية. راجع إرشادات التركيب الخاصة بتوصيل هذا الجهاز بالأرضي.

ركّب الجهاز في مكان أرضيته صلبة ومستوية.
- قد يؤدي عدم اتباع هذه التعليمات إلى حدوث اهتزازات أو ضوضاء أو مشكلات غير معتادة بالمنتج.

نظرًا لأن العناصر المكونة لمثبّت الشعر قد تخفض من خاصية امتصاص الماء للمبادل الحراري بحيث تظهر قطرات الندى على السطح الخارجي للجهاز عند تشغيل عملية التبريد. فلا تقم بتركيب الجهاز في صالون تجميل.

DV80H4000CX-03408G-01_AR.indd Sec1:7 2014-08-21 12:24:56

معلومات السلامة

علامات التحذير الصارمة المتعلقة بالاستخدام

تحذير

لا تضع الأطفال أو الحيوانات الأليفة فوق المنتج أو بداخله. بالإضافة إلى ذلك، قم بفك قفل الباب (ذراع الإطلاق) عند التخلص من المنتج.
- قد يتسبب هذا الأمر في سقوط الأطفال أو إصابتهم.
- في حالة احتباس الأطفال داخل المنتج، قد يتعرضوا للاختناق.

لا تحاول الوصول إلى ما بداخل المنتج أثناء دوران الحاوية.

لا تجلس فوق المنتج أو تتكئ على الباب.
- قد يتسبب هذا الأمر في انقلاب المنتج والتعرض للإصابة.

لا تجفف الغسيل إلا بعد تدويره في غسالة مناسبة.

تجنب تجفيف الملابس غير المغسولة داخل المجفف الدوار.

لا تشرب الماء المتكثف.

لا تقم بإيقاف المجفف الدوار قبل انتهاء دورة التجفيف ما لم يتم إخراج الغسيل بالكامل وتوزيعه بسرعة حتى تتبدد الحرارة.

يجب عدم تجفيف الغسيل الملوث بمواد قابلة للاشتعال مثل الجاز أو الكيروسين أو البنزين أو مرقق القوام أو الكحول أو ما إلى ذلك.
- قد ينتج عن هذا الأمر حدوث صدمة كهربية أو نشوب حريق أو انفجار.

لا تترك الحيوانات الأليفة تمضغ مكونات الغسالة أو تعبث بها.
- قد ينتج عن ذلك حدوث صدمة كهربية أو إصابة.

عند التخلص من المنتج، افصل الباب وانزع سلك التيار الكهربي قبل التخلص منه.
- قد يؤدي عدم الالتزام بهذه التعليمات إلى تلف سلك التيار الكهربي أو التعرض لإصابة.

لا تلمس قابس التيار الكهربي بيدين مُبتلتين.
- قد ينتج عن هذا الأمر التعرض لصدمة كهربية.

في حالة تسرب الغاز (الغاز الطبيعي أو غاز البروبان أو الغاز النفطي المُسال)، يجب تهوية المكان فورًا دون لمس الجهاز أو سلك التيار الكهربي.
- في هذا الوقت، لا تستخدم مروحة التهوية.
- قد تحدث شرارة وتؤدي إلى حدوث انفجار أو نشوب حريق.

لا تقم بإصلاح أي قطعة من الجهاز أو استبدالها أو محاولة صيانتها ما لم يكن موصى بذلك في إرشادات الإصلاح الذي يقوم به المستخدم. كما ينبغي أن تكون لديك المهارات اللازمة لصيانة هذا الجهاز.

لا تحاول إصلاح الجهاز أو فكّه أو تعديله بنفسك.
- يجب عدم استخدام أي صمام كهربائي (مثل، النحاس أو سلك معدني أو ما إلى ذلك) غير الصمام الكهربائي القياسي.
- عند الحاجة إلى إصلاح الجهاز أو إعادة تركيبه، اتصل بأقرب مركز صيانة.
- قد يؤدي الفشل في اتباع هذه التعليمات إلى حدوث صدمة كهربية أو نشوب حريق أو مشاكل تتعلق بالمنتج أو التعرض للإصابة.

تم تصميم المنتج الذي قمت بشرائه للاستخدام المنزلي فقط.

يُعد استخدام المنتج لأغراض العمل سوء استخدام له. وفي هذه الحالة، لا تتم تغطية المنتج من خلال الضمان الأساسي الذي تقدمه شركة Samsung، كما أن شركة Samsung لا تتحمل أي مسئولية عن الأعطال أو الخسائر التي تنجم عن سوء الاستخدام.

إذا أصدر المنتج صوتًا غريبًا أو رائحة احتراق شيء ما، فافصل التيار الكهربي عنه على الفور، واتصل بمركز الخدمة.
- وإلا، قد ينتج عن هذا حدوث صدمة كهربائية أو نشوب حريق.

DV80H4000CX-03408G-01_AR.indd Sec1:8 2014-08-21 12:24:56

علامات التنبيه المتعلقة بالاستخدام

تنبيه

لا تقف فوق الجهاز أو تضع أشياء فوقه (مثل. ملابس الغسيل أو شموع مُضاءة أو سجائر مشتعلة أو أطباق أو مواد كيماوية أو أشياء معدنية أو ما إلى ذلك).

- قد ينتج عن هذا الأمر الإصابة بصدمة كهربية أو نشوب حريق أو حدوث مشاكل بالمنتج أو وقوع إصابات.

لا تلمس الباب الزجاجي أو ما بداخل الحاوية أثناء التجفيف أو بعده مباشرة نظرًا لسخونته.

- قد ينتج عن هذا الأمر الإصابة بحروق.

لا تضغط على الأزرار باستخدام أدوات حادة. مثل المسامير أو السكاكين أو الأظافر أو غيرها.

- قد ينتج عن ذلك حدوث صدمة كهربية أو إصابة.

يحظر تجفيف الغسيل الذي يحتوي على مواد مطاطية (لاتكس) أو أقمشة مشابهة للمطاطية.

- عند ارتفاع درجة حرارة المواد المطاطية، فقد تبدأ في الاشتعال.

لا تجفف الملابس الملوثة بزيت نباتي أو زيت طعام نظرًا لتعذر إزالة كمية الزيت الكبيرة أثناء غسل الملابس. وبالإضافة إلى ذلك، استخدم دورة "تجفيف بارد" حتى لا ترتفع حرارة الغسيل.

- قد تتسبب حرارة أكسدة الزيت في نشوب حريق.

تأكد من إفراغ جميع جيوب الملابس التي سيتم تجفيفها.

- قد تتسبب الأشياء الصلبة والحادة مثل، العملات المعدنية أو الدبابيس أو المسامير أو المسامير الملولبة أو الأحجار في إحداث أضرار بالغة بالجهاز.

لا تجفف الملابس المزودة بأزرار أو إبزيمات كبيرة الحجم أو أشياء معدنية أخرى ثقيلة الوزن (مثل. السوست وخطافات الملابس والعروات والسترات المزودة بأزرار).
وإذا لزم الأمر، استخدم شبكة الغسيل لكميات الغسيل الصغيرة وخفيفة الوزن، مثل حزام القماش الذي يكون على شكل رابطة وسلاسل المريلة وحمالات الصدر التي يمكن أن تنفك أو تنكسر أثناء تشغيل إحدى الدورات.

نوصي بعدم استخدام أوراق التجفيف للحد من الكهرباء الساكنة لأن ذلك قد يؤدي إلى تلف في الغسيل وكذلك في الجهاز.

- قد يتسبب هذا الأمر في تلف الغسيل.

لا تستخدم المجفف بالقرب من المساحيق المخطيرة مثل. تراب الفحم أو دقيق القمح أو ما إلى ذلك.

- قد ينتج عن هذا الأمر حدوث صدمة كهربية أو نشوب حريق أو انفجار.

لا تضع المواد القابلة للاشتعال بالقرب من المنتج.

- قد يتسبب هذا الأمر في انبعاث غازات سامة من المنتج أو تلف أجزائه أو حدوث صدمة كهربية أو نشوب حريق أو انفجار.
- ينبغي عدم وضع الجهاز خلف الأبواب القابلة للغلق أو ما إلى ذلك.

لا تلمس الجانب الخلفي من الجهاز أثناء التجفيف أو فور اكتماله.

- يظل الجهاز ساخنًا، مما قد يؤدي إلى الإصابة بحروق.

DV80H4000CX-03408G-01_AR.indd Sec1:9 2014-08-21 12:24:56

معلومات السلامة

علامات التحذير الصارمة المتعلقة بالتنظيف

تحذير

لا تنظف الجهاز عن طريق رش الماء فوقه مباشرةً.
لا تستخدم البنزين أو مرقق الطلاء أو الكحول لتنظيف الجهاز.

- قد ينتج عن هذا الأمر تغيير في اللون أو تشويه أو تلف أو حدوث صدمة كهربية أو نشوب حريق.

افصل قابس الجهاز من مقبس الحائط قبل تنظيفه أو صيانته.

- فقد يؤدي عدم الالتزام بذلك إلى التعرض لصدمة كهربية أو نشوب حريق.

نظّف حاوية المصفاة قبل استخدام المجفف وبعد استخدامه.

نظف الأجزاء الداخلية للمنتج بانتظام عن طريق طلب المساعدة من مهندس صيانة معتمد.

نظّف المكثف بالماء مرة واحدة شهريًا.

يجب تنظيف الأجزاء الداخلية للمجفف بشكل دوري بواسطة فني صيانة مؤهل.

DV80H4000CX-03408G-01_AR.indd Sec1:10 2014-08-21 12:24:56

تركيب المجفف

إخراج المجفف من صندوق التعبئة ودليل التركيب

استعن بفني محترف لتركيب هذا المجفف بشكل صحيح. في حالة إجراء اتصال بمركز صيانة بسبب سوء التركيب أو الضبط أو التوصيل، يتحمل الفني الذي قام بتركيب المنتج المسؤولية. يوصى باستشارة فني محترف لتركيب هذا الجهاز، خاصة في عمليات التركيب الأكثر صعوبة التي تتضمن التصريف إلى مصدر المياه الرئيسي أو تثبيت المنتج. إذا كانت هناك مشكلات في التركيب أدت إلى الانتقال لموقع الصيانة لإصلاح الخطأ، يتحمل الفني الذي قام بتركيب المنتج المسؤولية.

تأكد من توفر جميع المستلزمات الضرورية للتركيب بشكل صحيح (جهد تيار متردد ٢٢٠ إلى ٢٤٠ فولت وتردد ٥٠ هرتز).

يجب توفر مأخذ تيار كهربي متصل بأرضي. راجع المتطلبات الكهربية (انظر صفحة ١٣).

نظرة حول السطح الخارجي للمجفف

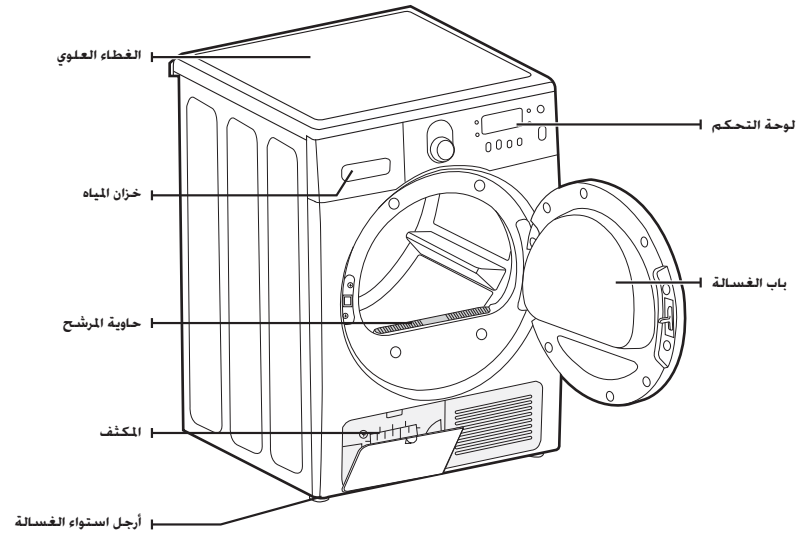

الأجزاء



حامل الخرطوم	رابط الكبل	موصل الخرطوم	خرطوم تصريف طويل (٢ م)	دليل إرشادات

DV80H4000CX-03408G-01_AR.indd Sec3:11 2014-08-21 12:24:56

تركيب المجفف

الفحص قبل التركيب

- لا توصل سلك التيار الكهربي بمقبس الحائط قبل اكتمال تركيب المجفف.
- افحص المظهر الخارجي للمنتج للتحقق من أي أجزاء تالفة قبل البدء في تركيب المنتج.
- في حالة وجود أي أجزاء تالفة، الرجاء الاتصال بأقرب "مركز خدمة عملاء لشركة Samsung".
- عند نقل المنتج، لا تنقله بنفسك.
- يجب توخي الحذر لأن حواف المجفف قد تكون حادة.
- لا تركب المجفف في مكان معرض للتجمد. قد يتسبب الماء البارد في تلف المنتج.
- استخدم المنتج في المنزل فقط.
- لا تضع المجفف على إحدى جانبيه عند حمله، ولا تنقله بطريقه تسبب اهتزازًا للأجزاء الداخلية، قد ينتج عن هذا الأمر تلف الأجزاء الداخلية للمنتج.

إجراءات ما قبل استخدام المنتج

- تحقق من وجود أي ملحقات متبقية داخل الحاوية.
- قم بتوصيل سلك التيار الكهربي قبل تشغيل المنتج.
- لا تغلق فتحة مدخل الهواء الخاصة بشبكة التبريد الموجود على اللوحة الأمامية للمجفف.
- لا تضع أشياءً قابلة للاشتعال بالقرب من المجفف، وحافظ دائمًا على نظافة الأشياء المحيطة.
- حافظ على أن يكون المجفف في نفس مستوى الأرض.
- لا تنزع أرجل المجفف القابلة للضبط، نظرًا لأنها ضرورية للحفاظ على مستوى المنتج في نفس مستوى الأرض.

تعليمات مهمة للتركيب

الرجاء قراءة الإرشادات التالية بعناية قبل تركيب المجفف. يجب الحفاظ على هذه الإرشادات للرجوع إليها في المستقبل.

⚠ تحذير: أزل الأبواب من جميع الأجهزة المهملة لتجنب خطر تعرض الأطفال للاختناق.

الاعتبارات المكانية

لا يتطلب الأمر وجود جهاز تهوية خارجي نظرًا لاختيار نوع مكثف يقوم بتكثيف الهواء وتوزيعه داخل المجفف.
لذلك يمكن تركيب المجفف واستخدامه في أي مكان تكون فيه درجة الحرارة بين ٥ و٣٥ درجة مئوية على عكس أجهزة المجفف التقليدية التي تتطلب نظامًا خارجيًا للتخلص من العوادم.

DV80H4000CX-03408G-01_AR.indd Sec3:12 2014-08-21 12:24:56

تركيب القنطرة أو الخزانة

لتشغيل المجفف الجديد بشكلٍ أمنٍ وسليم، يجب توفر الحد الأدنى من الفراغات حوله كما يلي:

الجوانب ـ ٢٥ مم	الجانب الخلفي ـ ٥١ مم
السطح العلوي ـ ٢٥ مم	الواجهة ـ ٤٦٥ مم

في حالة تركيب الغسالة والمجفف معًا، يجب أن يحتوي الجزء العلوي للقنطرة أو الخزانة على فتحة هواء غير مسدودة مساحتها ٤٦٥ مم على الأقل.

المتطلبات الكهربية

تتمثل المتطلبات الكهربية في جهد تيار متردد يتراوح بين ٢٢٠ و٢٤٠ فولت و٥٠ هرتز.

- قد يؤدي التوصيل غير الصحيح للموصل الأرضي للجهاز إلى خطر التعرض لصدمة كهربية.
استشر فني كهرباء أو فني صيانة مؤهلاً إذا لم تكن متأكدًا من صحة التوصيل الأرضي للجهاز. لا تقم بتعديل القابس المرفق مع المجفف.
وفي حالة عدم ملاءمته لمأخذ التيار، استشر فني كهرباء مؤهل لتركيب مأخذ تيار كهربي مناسب.
- لتفادي خطر حدوث حريق أو التعرض لصدمة كهربية أو إصابة جسدية، يجب أن تتم كافة عمليات توصيل الأسلاك والتوصيل الأرضي وفقًا للوائح المحلية. وفي حالة عدم وجود مثل هذه اللوائح المحلية، يقع على عاتقك تحمل المسؤولية الكاملة في توفير خدمات الصيانة الكهربية الكافية للمجفف.

تحذير

التوصيل الأرضي

يتعين توصيل المجفف بمأخذ أرضي. ففي حالة حدوث خلل أو تعطل في أداء المجفف، يعمل التوصيل الأرضي على تقليل خطورة التعرض لصدمة كهربية، وذلك بتوفير مسار لأقل مقاومة للتيار الكهربي.

يتم تزويد المجفف بسلك تيار كهربي به قابس طرف أرضي بثلاثة سنون لاستخدامه في أي مأخذ أرضي تم تركيبه بشكل صحيح.

لا تقم بتوصيل السلك الأرضي بخطوط مواسير السباكة البلاستيكية أو خطوط الغاز أو مواسير المياه الساخنة.

قد يؤدي التوصيل غير الصحيح للموصل الأرضي الخاص بالغسالة إلى حدوث صدمة كهربية.

استشر فني صيانة أو فني كهرباء مؤهلاً إذا لم تكن متأكدًا من صحة التوصيل الأرضي للمجفف. لا تعدل القابس المرفق مع المجفف. وفي حالة عدم توافقه مع مخرج التيار، استعن بفني كهرباء مؤهل لتركيب مأخذ مناسب.

قد يكون هناك خطر نشوب حريق أو التعرض لصدمة كهربية، إذا لم يتم توصيل المنتج بموصل أرضي.

تحذير

DV80H4000CX-03408G-01_AR.indd Sec3:13 2014-08-21 12:24:56

تركيب المجفف

التركيب جانب بجانب

للتركيب الصحيح، نُوصيك بالاستعانة بفني محترف. للتركيب:

١. نقل المجفف في مكانٍ مناسب للتركيب. قم بتركيب المجفف والغسالة بجانب بعضهما. ضع قطعتين من الكرتون على شكل وسادة على الأرض. قم بإمالة المجفف على جانبه حتى يُمكن وضعه في مقابل النهايات الكرتونية.

٢. ضبط الجزء الخلفي للمجفف في موضع عمودي.

٣. يتعين أن يكون المجفف في وضعٍ مستوٍ للتأكد من أنه يُوفر الأداء الأمثل للتجفيف. لتقليل الاهتزاز والضوضاء والحركة غير المرغوب فيها، يتعين أن تكون أرضية التثبيت بسطح صلب ومستوٍ تمامًا على الأرض.

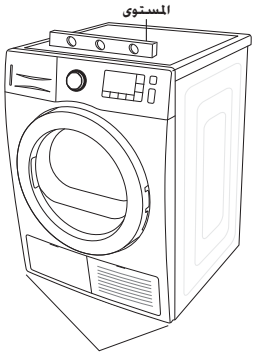

لضبط المجفف في نفس ارتفاع الغسالة، قم بتقليص أرجل الاستواء بالكامل بتدويرها عكس عقارب الساعة، ثم أرخ الأقدام بتدويرها في اتجاه عقارب الساعة.

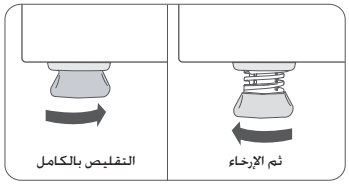

اضبط أرجل الاستواء بالقدر المطلوب فقط لكي يستوي المجفف. يمكن أن تتسبب إطالة أرجل الاستواء أكثر من اللازم في اهتزاز المجفف.

٤. راجع قسم المتطلبات الكهربية (انظر صفحة ١٣)،قبل التشغيل أو الاختبار.

٥. عند التسوية، تحقق من تسوية المجفف وإجراء التعديلات اللازمة لأرجل الاستواء.

٦. قم بتوصيل الكهرباء للمجفف وتحقق من عملية التشغيل مستخدمًا قائمة الفحص الموجودة أدناه.

قائمة الفحص النهائية للتركيب

- ☐ تم توصيل المجفف بمأخذ الكهرباء والتوصيل الأرضي بشكلٍ صحيح.
- ☐ تمت تسوية المجفف ووضعه على الأرض بإحكام.
- ☐ ابدأ تشغيل المجفف للتأكد من أنه يقوم بالتشغيل والتسخين وإيقاف التشغيل.

DV80H4000CX-03408G-01_AR.indd Sec3:14 2014-08-21 12:24:56

تصريف الماء بدون استخدام خزان الماء

يمكنك استخدام المجفف بدون استخدام خزان الماء عن طريق اتباع الإجراءات الموجودة أدناه.

توصيل خرطوم التصريف

يُمكن للمجفف ضخ الماء المتكثف خارج المجفف مباشرةً باستخدام خرطوم التصريف المرفق.
الإجراءات اللازمة لتوصيل خرطوم التصريف هي كالآتي.

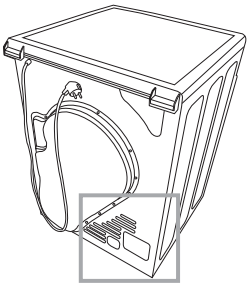

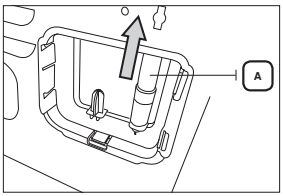

١. افصل خرطوم التصريف (A).

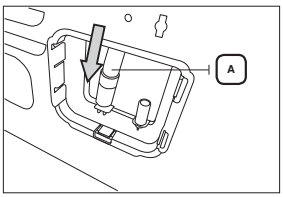

٢. وصّل خرطوم التصريف (A) بالجزء الآخر.

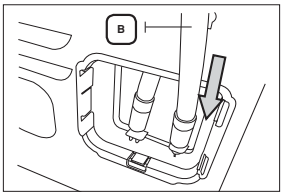

٣. وصّل الخرطوم الملحق (خرطوم تصريف طويل) (B) بالفتحة المجاورة للجزء المتصل به خرطوم التصريف (A).

تنبيه

- نظرًا لأن مضخة التصريف الخاصة بالمجفف يمكن أن تضخ مياه التصرف لأعلى حتى ارتفاع ٩٠ سم فقط، عند توصيل خرطوم التصريف (B) بنقطة التصريف هذه، تأكد من أن ارتفاع نقطة التصريف لا يتجاوز ٩٠ سم.
  قد يحدث خطأ في التصريف إذا تجاوزت نقطة التصريف ٩٠ سم. وفي حالة حدوث هذا الخطأ، تعرض لوحة التحكم رمز خطأ.
- بعد توصيل خرطوم التصريف، يُمكنك تصريف الماء المتكثف مباشرةً عن طريق منفذ التصريف بواسطة خرطوم التصريف المتصل أو من خلال المغسلة أو منفذ تصريف المغسلة.

DV80H4000CX-03408G-01_AR.indd Sec3:15 2014-08-21 12:24:56

تركيب المجفف

توصيل خرطوم التصريف

يمكنك وضع طرف خرطوم التصريف بثلاث طرق:

١. **فوق حافة حوض الغسيل**: يجب وضع خرطوم التصريف على مسافة أقل من ٩٠ سم. إذا كان طرف خرطوم التصريف يحتاج إلى وضعه فوق سطح الأرض، فإننا نوصي بوضعه على ارتفاع يتراوح بين ٦٠ سم و٩٠ سم. ولإبقاء أنبوب خرطوم التصريف في حالة انثناء، استخدم دليل الخرطوم البلاستيكي المرفق مع الجهاز. ثبت الموجه على الجدار بواسطة خطاف أو في الصنبور بواسطة سلك أو حبل لمنع خرطوم التصريف من التحرك.

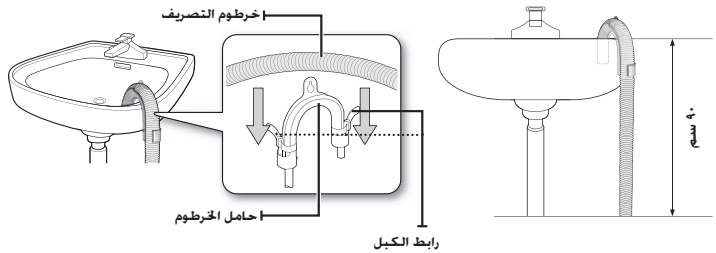

٢. قم بتجميع خرطوم التصريف وموجه الخرطوم واربطهما مستخدمًا رابط الكبل.

٣. يُمكنك تصريف الماء المتكثف عن طريق توصيل الخرطوم الملحق (خرطوم التصريف الطويل) بمنفذ التصريف مباشرةً.

توصيل الخرطوم المباشر

يُمكنك على الفور تصريف الماء المتكثف الذي يخرج أثناء التجفيف، عن طريق توصيل خرطوم التصريف بالصنبور.

١. قم بتجميع موصل الخرطوم والخرطوم.

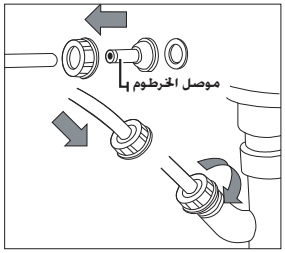

تنبيه: نظرًا لأن هناك خطر تسرب للمياه من موصل الخرطوم والخرطوم الملحق، فتأكد من توصيلهما بإحكام.

٢. قم بتوصيل طرف الخرطوم بالصنبور.

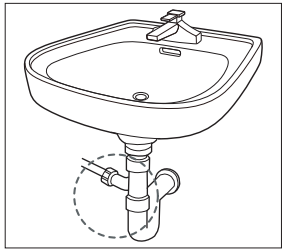

DV80H4000CX-03408G-01_AR.indd Sec3:16 2014-08-21 12:24:56

أدوات التركيب

في حالة شراء أدوات تثبيت إضافية، الرجاء الاتصال بمركز خدمة Samsung أو الموزعين المحليين. [الجزء رقم SK-DH / SK-DA / SKK-DF]
تختلف أدوات التثبيت الإضافية وفقًا للطراز.

١. ضع المجفف على جانبه بحرص. استخدم مواد التغليف لتجنب خدش سطح المجفف.

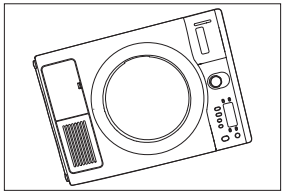

٢. ركّب الوسائد المطاطية لقاعدة المجفف.
- ضع الوسائد المطاطية الأربع داخل حزمة الأجزاء، أدخل الوسائد المطاطية داخل الفتحات الموجودة في باطن أرجل الاستواء.
- قم بشراء حزمة أدوات التثبيت الإضافية.

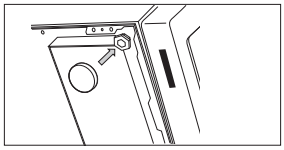

٣. اضبط المجفف في وضع عمودي.

تنبيه: يمكنك تركيب أدوات التثبيت لمجموعة منتجات شركة Samsung فقط.

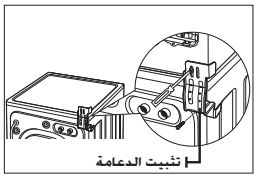

٤. ركّب دعامة للمجفف.
- انزع مسمار الغطاء العلوي للغسالة من يسار الجزء الخلفي. قم بمحاذاة فتحات الدعامة اليسرى مع فتحة مسمار الغطاء العلوي على يسار الجزء الخلفي للوحدة واستبدل المسمار.

اترك المسمار القلاووظ مرتخيًا لتسهل محاذاة فتحة المجفف.
- أعد الخطوة المذكورة أعلاه مع الجانب الأيمن.

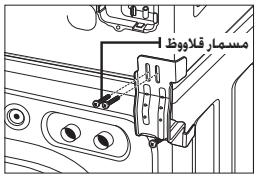

٥. ركّب المجفف والدعامة في الغسالة

تحذير:
- ارفع المجفف على الجزء العلوي من الغسالة. قم بحماية لوحة تحكم الغسالة باستخدام ورق كرتون أو أي وسائل حماية أخرى. تأكد من رفع المجفف لأعلى بقدر كافٍ لتتمكن من تنظيف لوحة تحكم الغسالة.
- يُستحسن أن يقوم برفع المجفف لمكانه المناسب أكثر من شخصين، وذلك بسبب وزنه وحجمه. قد يؤدي عدم القيام بذلك إلى التعرض للإصابة.
- قم بمحاذاة الفتحات الموجودة في الدعامة مع الفتحات الموجودة بالجزء الخلفي للمجفف. وباستخدام مفك براغي، اربط المسامير الملولبة M٤x١٢.
- أحكم ربط مسامير دعامة الغسالة، ثم أحكم ربط جميع مسامير أدوات التثبيت.

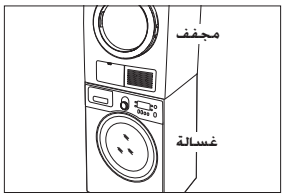

DV80H4000CX-03408G-01_AR.indd Sec3:17 2014-08-21 12:24:57

تركيب المجفف

١. اللمسات الأخيرة في عملية التركيب

تحذير
- ارجع إلى إرشادات تركيب الغسالة لإكمال تركيبها.
- راجع إرشادات تركيب المجفف لاستكمال تركيبه.
- قم بتمرير المجفف والغسالة المكَدّسين أو إزاحتهما لمكانهما المناسب. استخدم وسائد لبادية أو جهاز زالق آخر للمساعدة في التحريك وحماية الأرضية.

لا تدفع المجفف عند الانتهاء من تركيبه على الجزء العلوي للغسالة. قد يؤدي دفع المجفف إلى قرص الأصابع.

عكس اتجاه دوران الباب

يُمكنك تغيير اتجاه فتح الباب وفقًا للمتطلبات الخاصة بك (مكان التركيب و قيود المساحات).

تحذير يتم ذلك وفقًا لاحتياجات العميل. يُمكن للفني المؤهل أو العميل القيام بذلك مباشرةً بنفسيهما.

١. افصل سلك التيار الكهربي.
٢. أزل المسمارين من مفصلة الباب.
٣. ارفع الباب لفصله.

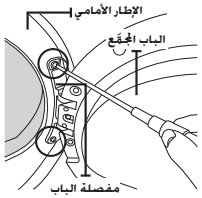

٤. أزل الستة عشر مسمارًا.
وقم بفك قفل الهواء. ثم أزل المسامير الستة.
(للطُرز المزودة بأبواب من البلور اللامع فقط)

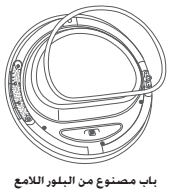
باب مصنوع من البلور اللامع

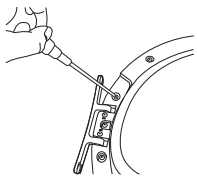

٥. بعد فك المسامير، قم بلف مجموعة مفصلة الباب ومقبضه ١٨٠ درجة كما هو موضح في الشكل.

تنبيه
- تعامل بحرص حتى لا ينفك قفل الباب.

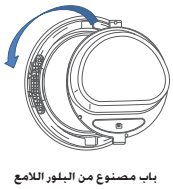
باب مصنوع من البلور اللامع

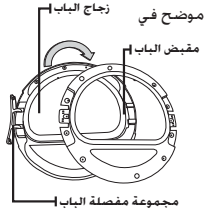

٦. ثبّت الستة عشر مسمارًا في الأماكن المخصصة.
ثم ثبّت المسامير الستة واستبدل قفل الهواء.
(للطُرز المزودة بأبواب من البلور اللامع فقط)
٧. لاحظ جيدًا أن اثنين من المسامير القلاووظ بأطوال مختلفة عن المسامير الأخرى. (استخدم المسامير الأطول لذراع الباب.)

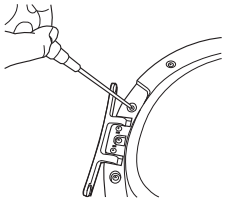

DV80H4000CX-03408G-01_AR.indd Sec3:18 2014-08-21 12:24:58

٨. قم بنقل موضع المسمار الموجود على الجزء الخلفي لمفصلة الباب.

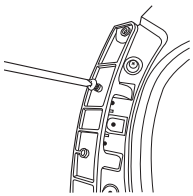

٩. قم بتثبيت المسمار أسفل الفتحة.

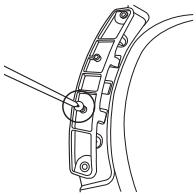

١٠. انزع المسمارين مسكًا بالإطار الأمامي الموجود على الجهة اليسرى.
١١. انزع المسمارين مسكًا بذراع الماسك الموجود بالجهة اليسرى.

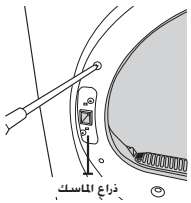

١٢. الآن، انتقل إلى الجانب الأيمن للمنتج وثبت المسمارين مسكًا بالإطار الأمامي مع تثبيت المسمارين مسكًا بذراع الماسك.

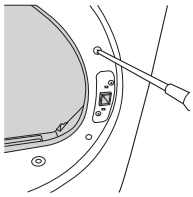

١٣. قم بمحاذاة الباب مع فتحات التثبيت.
١٤. ثبّت المسمارين مسكًا بمفصلة الباب.

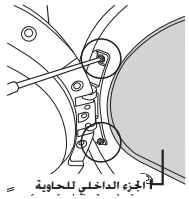

يُمكنك استعادة اتجاه فتح الباب باتباع الإجراءات سالفة الذكر إذا لزم الأمر.

DV80H4000CX-03408G-01_AR.indd Sec3:19 2014-08-21 12:24:58

إرشادات التشغيل والنصائح المساعدة

تنبيه

لتقليل احتمالات نشوب حريق أو التعرض لصدمة كهربية أو حدوث إصابات جسدية، اقرأ إرشادات المحافظة على السلامة المهمة قبل تشغيل هذا الجهاز.

إذا لم يتم تحديد الخيار منع التجعد، فأخرج الغسيل فور غسله وتجفيفه. قد ينتج عن ترك الغسيل داخل الحاوية وجود تجعدات.

شكل لوحة التحكم

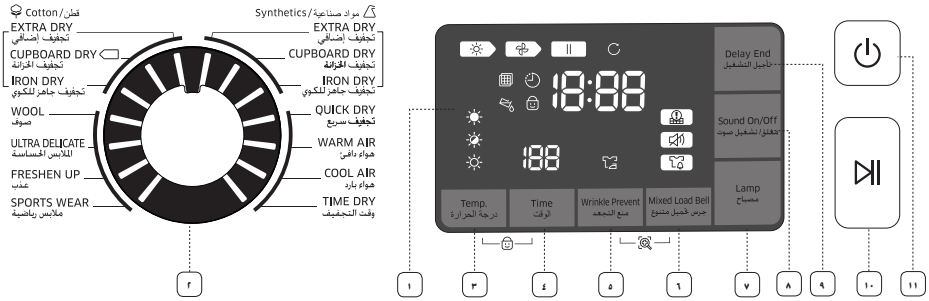

١ لوحة عرض رسومية رقمية	تعرض الوقت المتبقي لدورة التجفيف وكافة المعلومات الخاصة بالدورة ورسائل الخطأ. توضح نافذة العرض الوقت المتبقي المقدر في الدورة بعد الضغط على الزر **بدء/إيقاف مؤقت**. قد يتقلب الوقت المتبقي المقدر بينما تتقدم الدورة. سيضيء مصباح "التجفيف" ويظل هكذا حتى تكتمل الدورة. عندما يكون المجفف في مرحلة التجفيف البارد، سيضيء مصباح "التبريد" عندما يكون المجفف في مرحلة منع التجعد، سيضيء "مصباح منع التجعد". عند اكتمال الدورة، ستظهر كلمة End (إنهاء) في لوحة العرض حتى تضغط على الزر **بدء/إيقاف مؤقت** أو الزر **الطاقة**. إذا تم إيقاف المجفف مؤقتًا أثناء تشغيل دورة ما، فستضيء المؤشرات حتى تضغط على الزر **بدء/إيقاف مؤقت**.
٢ قرص تحديد الدورة	عند تشغيل المجفف، يتم تحديد الدورة [قطن] تجفيف الخزانة بشكل افتراضي. لف "قرص تحديد الدورة" لتحديد الدورة الذي تريدها. **قطن** - للملابس القطنية وأغطية السرير والمفارش المصنوعة من الكتان والملابس الداخلية والمناشف والقمصان متوسطة أو خفيفة الاتساخ وما إلى ذلك. • تجفيف إضافي - للملابس ثقيلة الوزن أو قطع الغسيل التي ينبغي تجفيفها جيدًا. • تجفيف الخزانة - استخدم هذه الدورة لتجفيف الملابس. مثل الملابس القطنية والداخلية والملابس المصنوعة من الكتان (غير مناسب للملابس الجينز). • تجفيف جاهز للكوي - يعمل هذا الخيار على إنهاء دورة التجفيف في حالة رطبة بقدرٍ يتلاءم مع الكي. **مواد صناعية** - البلوزات والقمصان متوسطة أو خفيفة الاتساخ وغيرها من الملابس المصنوعة من البوليستر (الديولين والتريفيرا) ومادة البوليامايد (البيرلون والنيلون) أو الأنسجة الصناعية الأخرى. • تجفيف إضافي - للملابس ثقيلة الوزن أو قطع الغسيل التي ينبغي تجفيفها جيدًا. • تجفيف الخزانة - استخدم هذه الدورة لتجفيف الملابس. مثل القمصان والبلوزات وأغطية السرير والمفارش المصنوعة من الكتان. (غير مناسبة للملابس الجينز). • تجفيف جاهز للكوي - يعمل هذا الخيار على إنهاء دورة التجفيف في حالة رطبة بقدرٍ يتلاءم مع الكي. **تجفيف سريع** - يتم ضبط وقت التجفيف تلقائيًا على ٢٩ دقيقة. **هواء دافئ** - لقطع الغسيل الصغيرة والأقمشة العادية والملابس المجففة مسبقًا خلال ٢٠ دقيقة. **هواء بارد** - لجميع الأقمشة التي تحتاج إلى دورات إنعاش من دون حرارة.

DV80H4000CX-03408G-01_AR.indd Sec5:20 2014-08-21 12:24:58

٣ قرص تحديد الدورة	**وقت التجفيف** - يتيح لك "وقت التجفيف" تحديد وقت الدورة المطلوب. أدر قرص تحديد الدورة إلى وقت التجفيف، ثم اضغط على الزر **الوقت** لتعيين وقت التجفيف. اضغط على الزر **الوقت** بشكل متكرر للتنقل عبر إعدادات الوقت. يتزايد وقت التجفيف كل ٢٠ دقيقة حتى يصل إلى ٩٠ دقيقة. بعد تجفيف الغسيل باستخدام دورة التجفيف الهوائي العادية، ستشعر بأن الغسيل غير جاف تمامًا. وبإمكانك زيادة وقت التجفيف مستخدمًا الدورة وقت التجفيف. بعد تجفيف الغسيل باستخدام دورة تجفيف، ستشعر بأن الغسيل غير جاف تمامًا. وبإمكانك زيادة وقت التجفيف مستخدمًا الدورة وقت التجفيف. **صوف** - لغسل المنتجات الصوفية القابلة للغسل والتجفيف بالتدوير في الغسالة فقط. للحصول على نتائج تجفيف أفضل، اقلب الملابس على ظهرها قبل تجفيفها. قد لا تؤدي زيادة حمولة المجفف إلى الحصول على نفس النتائج. بالنسبة للحمولة القصوى لكل دورة تجفيف، الرجاء الرجوع إلى "جدول الدورات" الموجود في الفهرس. **الملابس الحساسة** تم تصميم دورة "الملابس الناعمة" خصيصًا للملابس الداخلية للنساء. **عذب** - بتشغيل هذه الدورة، يُمكن التخلص من الروائح خصوصًا أنها تعمل على إنعاش الملابس. **ملابس رياضية** - استخدم الملابس الرياضية الخفيفة، مثل البذلة الرياضية.
٤ الزر درجة الحرارة	اضغط هذا الزر بشكل متكرر للتبديل بين مستويات درجات الحرارة المتوفرة للتجفيف. (☀ : عالٍ ☀ : متوسط، ☀ : منخفض)
٤ الزر الوقت	عند استخدام الدورات وقت التجفيف وهواء دافئ وهواء بارد، يمكن ضبط المدة بالضغط على الزر **الوقت**. ٢٠ دقيقة ← ٣٠ دقيقة ← ٤٠ دقيقة ← ٥٠ دقيقة ← ٦٠ دقيقة ← ٧٠دقيقة ← ٨٠ دقيقة ← ٩٠ دقيقة باستثناء الدورة وقت التجفيف أو تجفيف سريع أو هواء دافئ أو هواء بارد. يتم إيقاف تشغيل مؤشر الوقت في الوضع "يدوي" حيث يتم تحديد أوقات التجفيف الدقيقة حسب مستويات الرطوبة المتقلبة.
٥ الزر منع التجعد	يوفر وضع "منع التجعد" حوالي ٦٠ دقيقة من التدوير المتقطع في هواء خالٍ من الحرارة في نهاية الدورات لتقليل التجعد. اضغط على الزر **منع التجعد** لتنشيط هذه الميزة. يضيء ضوء المؤشر الموجود فوق اللوحة عند تحديد الزر "منع التجعد". يُمكن منع الملابس الجافة من التجعد عن طريق تدوير الحاوية بصفة دورية بعد اكتمال دورة التجفيف. (حتى بعد عرض End (إنهاء)، تدور الحاوية على فترات متقطعة.)
٦ الزر جرس تحميل متنوع	هذا الزر عبارة عن تنبيه لإعلام المستخدم بوصول معدل التجفيف إلى مستوى التجفيف الرطب (جاف بنسبة ٨٠٪). وذلك عند وجود أنواع مختلفة من الأقمشة والأنسجة ضمن الغسيل. إذا تم الوصول للحالة المناسبة، فسيومض مؤشر جرس التحميل المتنوع LED
٧ الزر مصباح	لإضاءة حاوية المجفف أثناء تشغيل المجفف. يمكن ضبطه ليس فقط أثناء تشغيل المجفف، بل أثناء إيقافه أيضًا. إذا لم تقم بإيقاف تشغيل "إضاءة الحوض" خلال ٥ دقائق من تشغيله، فسيتم إيقاف تشغيله تلقائيًا.
٨ الزر مغلق/تشغيل صوت	يمكن تحديد الوظيفة مغلق/تشغيل صوت أثناء تشغيل جميع الدورات. عند تحديد هذه الوظيفة، يتم إيقاف تشغيل الصوت لجميع الدورات. حتى في حالة تشغيل الطاقة أو إيقاف تشغيلها بشكل متكرر، لا يتغير الإعداد الذي تم اختياره.
٩ الزر تأجيل التشغيل	اضغط على هذا الزر بشكل متكرر للتبديل بين خيارات تأجيل التشغيل المتوفرة: (من ساعة حتى ١٩ ساعة، بزيادة ساعة واحدة في كل مرة). تشير الساعة المعروضة إلى وقت انتهاء دورة التجفيف. راجع الصفحة ٢٤ للحصول على تفاصيل.
١٠ الزر بدء/إيقاف مؤقت	اضغط لبدء تشغيل دورة التجفيف. في حالة تشغيل المجفف، اضغط على الزر مرة واحدة وسيتم إيقاف تشغيل المجفف مؤقتًا. اضغط عليه مرة أخرى لإعادة تشغيل دورة المجفف.
١١ الزر الطاقة	اضغط على الزر مرة واحدة لتشغيل المجفف، ثم اضغط عليه مرة أخرى لإيقاف التشغيل. في حالة عدم الضغط على أي من أزرار المجفف لمدة تزيد عن ١٠ دقائق وهو قيد التشغيل، يتم إيقاف تشغيله تلقائيًا.

DV80H4000CX-03408G-01_AR.indd Sec5:21 2014-08-21 12:24:58

إرشادات التشغيل والنصائح المساعدة

إذا أدخلت غسيلاً متشابكًا للغاية في المجفف بعد انتهاء الغسالة من دورة الغسل أو التنشيف مباشرةً، فقد تنخفض كفاءة التجفيف أو يؤدي ذلك إلى فتح الباب.
لذا، نوصي بفك تشابك الغسيل بطريقة مناسبة قبل إدخاله في المجفف.

كل مؤشر في شاشة العرض الرسومية يشير إلى:

التجفيف قيد التقدم		درجة الحرارة ٣ (عالٍ)	
التبريد قيد التقدم		درجة الحرارة ٢ (متوسط)	
إيقاف		درجة الحرارة ١ (منخفض)	
فحص المصفاة		تنبيه تنظيف المكثف	
تأجيل التشغيل		مغلق/تشغيل صوت	
تفريغ الماء المتكثف		جرس خمول متنوع	
تشغيل/إيقاف تشغيل التأمين ضد عبث الأطفال		الفحص الذكي	

DV80H4000CX-03408G-01_AR.indd Sec5:22 2014-08-21 12:24:59

التأمين ضد عبث الأطفال

هذه الوظيفة لمنع الأطفال من العبث بالمجفف.

التنشيط /إلغاء التنشيط

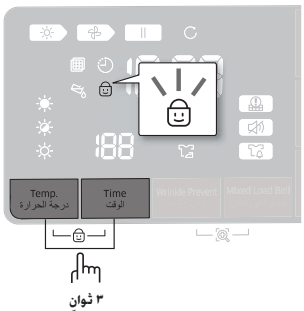

إذا أردت تنشيط ميزة التأمين ضد عبث الأطفال أو إلغاء تشيطها، فاضغط على كلا الزرين **درجة الحرارة** و**الوقت** معًا لمدة ثلاث ثوانٍ.

سيضيء الرمز "**التأمين ضد عبث الأطفال**" عند تنشيط هذه الميزة.

- عند تشغيل الطاقة، تتوفر الوظيفة التأمين ضد عبث الأطفال.
- بمجرد تعيين الوظيفة التأمين ضد عبث الأطفال، تتعذر استجابة أي زر، بخلاف الزر **الطاقة** حتى تقوم بتحرير الوظيفة التأمين ضد عبث الأطفال.
- عند تشغيل المجفف مرةً أخرى، تظل الوظيفة التأمين ضد عبث الأطفال قيد التشغيل.
- عند عدم استجابة الأزرار الأخرى، باستثناء الزر **الطاقة**، تحقق من المؤشر التأمين ضد عبث الأطفال لمعرفة ما إذا كانت الوظيفة قيد التشغيل أم لا.

مغلق/تشغيل صوت

يمكن تحديد الوظيفة مغلق/تشغيل صوت أثناء تشغيل جميع الدورات. عند تحديد هذه الوظيفة، يتم إيقاف تشغيل الصوت لجميع الدورات. حتى في حالة تشغيل الطاقة أو إيقاف تشغيلها بشكل متكرر، لا يتغير الإعداد الذي تم اختياره.

التنشيط /إلغاء التنشيط

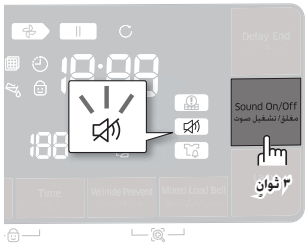

إذا أردت تنشيط الوظيفة مغلق/تشغيل صوت أو إلغاء تنشيطها، فاضغط على الزر **مغلق/تشغيل صوت** .

DV80H4000CX-03408G-01_AR.indd Sec5:23 2014-08-21 12:24:59

إرشادات التشغيل والنصائح المساعدة

تأجيل التشغيل

يُمكنك ضبط المجفف ليتمكن من إنهاء دورة التجفيف تلقائيًا في وقت لاحق. كما يُمكنك اختيار مدة التأجيل بين ١ إلى ١٩ ساعة (بزيادات من ساعة واحدة). تُشير الساعة المعروضة إلى الوقت الذي يتم عنده نهاية التجفيف.

تتراوح إعدادات "تأجيل التشغيل" من ساعة إلى ١٩ ساعة وفقًا للدورة.

١. يمكنك ضبط المجفف تلقائيًا أو يدويًا حسب نوع الملابس التي تريد تجفيفها.
٢. اضغط على الزر **تأجيل التشغيل** بشكل متكرر حتى تصل إلى وقت التأجيل المطلوب. إذا تم ضبط وقت التأجيل، تصبح الوظيفة "تأجيل التشغيل" في وضع "التشغيل".
٣. اضغط على الزر **بدء/إيقاف مؤقت**. وسيومض المؤشر "تأجيل التشغيل ⏲"، وستبدأ الساعة بالعد التنازلي حتى تبلغ الوقت المحدد.
٤. لإلغاء وظيفة تأجيل التشغيل، اضغط على الزر **الطاقة**، ثم شغّل المجفف مرة أخرى.

مصباح داخلي (في بعض الطُرز)

لإضاءة حاوية المجفف أثناء تشغيل المجفف.

الضبط والإيقاف

إذا كنت تريد ضبط "المصباح الداخلي" أو إيقافه، فاضغط على زري **مصباح** في آن واحد.

يمكن ضبط المصباح طالما أن الطاقة قيد التشغيل. إذا لم تقم بإيقاف تشغيل "إضاءة الحوض" خلال ٥ دقائق من تشغيله، فسيتم إيقاف تشغيله تلقائيًا.

DV80H4000CX-03408G-01_AR.indd Sec5:24 2014-08-21 12:25:00

الفحص الذكي

تمكنك هذه الوظيفة من فحص حالة المجفف مستخدمًا هاتف ذكي.

تم تحسين الوظيفة الفحص الذكي لما يلي:
سلسلة Galaxy وسلسلة iPhone (لا يمكن دعمها في بعض الطُرز)

تنزيل تطبيق غسالة Samsung الذكية

قم بتنزيل تطبيق غسالة Samsung الذكية على هاتفك المحمول من متجر Android أومتجر تطبيقات Apple ثم ثبّته. يمكنك العثور عليه بسهولة بالبحث عن "**غسالة Samsung الذكية**".

استخدام وظيفة الفحص الذكي

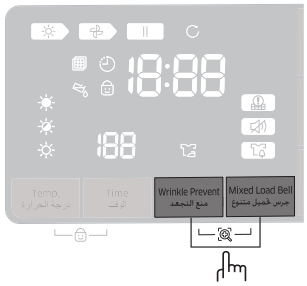

١. اضغط على الزرين **منع التجعد** و **جرس تحميل متنوع** في نفس الوقت لمدة ٣ ثوان عند حدوث خطأ في تشغيل وظيفة الفحص الذكي. وبدلًا من ذلك، يمكن أن يتم تشغيل الوظيفة الفحص الذكي إذا لم يتم الضغط على أي زر بعد تشغيل المجفف.

٢. تدور مقاطع شاشة LED الظاهرة على لوحة العرض لمدة ثانيتين أو ثلاث. ويتم عرض رمز "الفحص الذكي" على لوحة عرض المجفف.

٣. قم بتشغيل تطبيق **غسالة Samsung الذكية** على الهاتف الذكي الخاص بك ثم اضغط على الزر **الفحص الذكي**.

قد يتغير اختيار "الفحص الذكي" إلى "العناية الذكية" وفقًا لتحديد اللغة.

٤. وجّه كاميرا هاتفك الذكي إلى رمز "الفحص الذكي" الظاهر على لوحة عرض المجفف.

- إذا أضاء مصباح أو مصباح فلوري أو مؤشر في لوحة عرض المجفف، فقد يتعذر على الهاتف الذكي التعرف بسهولة على رمز "الفحص الذكي".
- إذا قمت بالضغط على الهاتف الذكي عند زاوية متسعة على لوحة العرض، فقد يتعذر التعرف على رمز الخطأ. للحصول على أفضل النتائج، اضغط على الهاتف الذكي بحيث يكون الجزء الأمامي للوحة العرض موازيًا للهاتف الذكي تمامًا أو إلى حد ما.

٥. إذا تم وضع الهاتف بشكل صحيح، يتم التعرُّف تلقائيًا على رمز "الفحص الذكي" ويتم عرض معلومات تفصيلية حول حالة المجفف والخطأ والإجراءات المضادة على هاتفك الذكي.

٦. إذا تعذر على الهاتف الذكي التعرف على رمز "الفحص الذكي" لأكثر من مرتين، فالرجاء إدخال رمز "الفحص الذكي" الظاهر على لوحة عرض المجفف في تطبيق غسالة Samsung الذكية يدويًا.

DV80H4000CX-03408G-01_AR.indd Sec5:25 2014-08-21 12:25:00

إرشادات التشغيل والنصائح المساعدة

رف التجفيف (في بعض الطُرز)

تركيب رف التجفيف

١. افتح باب المجفف.
٢. ضع رف التجفيف في الحاوية الدوارة، وذلك من خلال وضع الحافة الأمامية لرف التجفيف في الجزء العلوي من علبة مصفاة النسالات.
٣. ضع قطع الغسيل لتجفيفها على الرف تاركًا مسافة بحيث يمكن دخول الهواء بينها.
٤. أغلق باب المجفف.
٥. اضغط على الزر **الطاقة**.
٦. حدد وقت التجفيف باستخدام قرص تحديد الدورة، واضبط الوقت، ثم اضغط على الزر **رف التجفيف**.

- يمكنك ضبط مدة التجفيف حتى ٩٠ دقيقة. يتم ضبط إعداد درجة الحرارة تلقائيًا على "منخفض". ولا يمكن تغييره. حدد الوقت وفقًا لرطوبة قطع الملابس ووزنها. وشغّل المجفف. قد يلزمك إعادة ضبط المؤقت إذا احتجت إلى زيادة وقت التجفيف.
- إذا لم يتم تحديد الدورة وقت التجفيف، فلن يتم تحديد الوظيفة "رف التجفيف".

٧. اضغط على الزر **بدء/إيقاف مؤقت**.

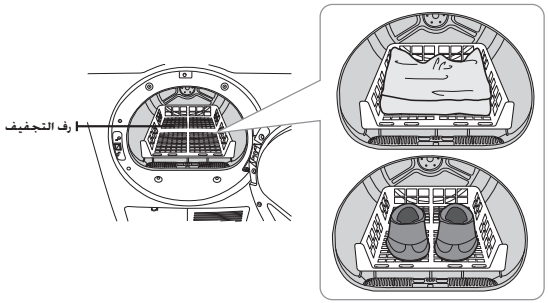

قطع الغسيل الموصى بوضعها	ملاحظات (١,٥ كجم بحد أقصى)
المعاطف القابلة للغسل (حافظ على شكل الملابس وضعها مسطحة على الرف)	عند تجفيف الغسيل مستخدمًا الرف، اطو الملابس، ثم ضعها عليه لمنع تجعد الملابس.
الدمى المحشوة (المحشوة بالأقمشة القطنية أو المصنوعة من البوليستر)	
الدمى المحشوة (المحشوة بالمادة الرغوية أو المطاط)	
وسائد محشوة بالمطاط الإسفنجي	
الأحذية الخفيفة	لتجفيف الأحذية الرياضية، ضع الحذاء على الرف بحيث تكون نعالها متجهة لأسفل.

تحذير: قد يتسبب تجفيف المطاط الإسفنجي أو البلاستيك أو المطاط مستخدمًا أحد إعدادات التسخين في تلف قطع الغسيل، وقد يؤدي إلى خطر نشوب حريق.

تنبيه: نظرًا لاحتمال حدوث تلف عند تجفيف الأحذية، استخدم دورة رف التجفيف (Rack Dry) لتجفيف الأحذية.

DV80H4000CX-03408G-01_AR.indd Sec5:26 2014-08-21 12:25:00

ملء حمولة المجفف بطريقة صحيحة

- ضع كمية غسيل واحدة فقط في كل مرة.
- يتم تجفيف حمولات الملابس المتنوعة من ملابس ذات أوزان ثقيلة وأخرى خفيفة بطريقة مختلفة. بحيث يؤدي ذلك إلى تجفيف الملابس خفيفة الوزن بينما تظل الملابس ثقيلة الوزن رطبة حتى نهاية دورة التجفيف.
- أضف قطعة غسيل أو أكثر من قطع الغسيل المتشابهة في المجفف عندما تحتاج لتجفيف قطعة واحدة فقط أو قطعتين من الملابس؛ حيث يُحسن ذلك إجراء التدوير وكفاءة التجفيف.
- تعمل الحمولة الزائدة على تقييد عملية التدوير، مما ينتج عنه تجفيف غير مستوٍ للملابس بالإضافة إلى التجعد الزائد لبعض أنواع الأقمشة.
- تأكد من إدخال الملابس التي تم تدويرها في غسالة مناسبة.
- عدم تجفيف الأقمشة غير المغسولة
- ينبغي عدم تجفيف الأقمشة الملامسة المبقعة بالزيت أو الكحول أو البترول أو ما إلى ذلك.

بدء العمل

١. ضع قدرًا قليلاً من الغسيل في المجفف - تجنب "الحمولة الزائدة".
٢. أغلق الباب.
٣. حدد الدورة والخيارات المناسبة لكمية الغسيل (راجع الصفحتين ٢٣و٢٤).
٤. اضغط على الزر **بدء/إيقاف مؤقت**.
٥. سيضيء مؤشر المجفف.
٦. سيظهر وقت الدورة المقدر في شاشة العرض.
قد يتقلب الوقت ليُشير على نحو أفضل لوقت التجفيف المتبقي في الدورة.

- عند اكتمال الدورة، يظهر الخيار End (إنهاء) على شاشة العرض.
- يعمل الضغط على الزر "طاقة" لإلغاء الدورة وإيقاف تشغيل المجفف.
- يُضيء مؤشر "التجفيف" و"التبريد" و"منع التجعد" أثناء أجزاء هذه الدورة.

DV80H4000CX-03408G-01_AR.indd Sec5:27 2014-08-21 12:25:00

العناية والنظافة

نظّف حاوية المصفاة

- بعد كل حمولة.
- لتقليل وقت التجفيف.
- لاستغلال الطاقة بكفاءة أكبر.

لا تقم بتشغيل المجفف بدون أن تكون علبة المصفاة في مكانها المناسب.

تنبيه يوجد خطر تلف الملابس عند تجفيف الملابس بدون علبة المصفاة.

تنظيف المكثف

- نظّفه مرة كل شهر
- نظّفه بالماء

تنبيه قد يتدهور أداء التجفيف، إذا لم يتم التنظيف لفترة طويلة.

لوحة التحكم

نظّفها باستخدام قطعة قماش ناعمة ورطبة. لا تستخدم مواد كاشطة.
لا ترش المنظفات على اللوحة مباشرة.
قد يتلف السطح الخارجي للوحة التحكم بواسطة بعض منتجات الملابس المعالجة المسبقة التي تُستخدم لإزالة التلوث والبقع.
استعمل مثل هذه المنتجات بعيدًا عن المجفف وامسح أي بقع أو كميات الرش الزائدة على الفور.

البرميل الدوار

أزل أي بقع مثل الكربون أو الحبر أو أصباغ الملابس (من العناصر الجديدة مثل المناشف أو الجينز) باستخدام منظف يفي بهذه الأغراض كافة.
قم بتدوير المناشف أو قطع القماش القديمة لإزالة أي بقع زائدة أو مواد تنظيف.
عند اتباع هذه الخطوات، قد تَظل هذه البقع ظاهرة. لكن ينبغي عدم نقلها إلى الحمولات التالية من الملابس.

حاوية دوارة من الفولاذ غير القابل للصدأ

لتنظيف البرميل الدوار المصنوع من الاستانلس المضاد للصدأ، استخدم قطعة قماش مبللة مع منظف رطب غير كاشط ومناسب للأسطح المصنوعة من الاستانلس المضاد للصدأ.
أزل بقايا المنظف وقم بالتجفيف باستخدام قطعة قماش نظيفة.

السطح الخارجي للمجفف

للمجفف بالكامل لمسات تجميلية عالية اللمعة. قم بالتنظيف باستخدام قطعة قماش ناعمة ورطبة. لا تستخدم مواد كاشطة. وقم بحماية سطح المنتج من الأجسام الحادة لأنها قد تتسبب في خدش الشكل الخارجي للمنتج أو تلفه.
لا تضع أي أجسام ثقيلة أو حادة ولا علبة المنظف على المجفف. بل احفظها بالقاعدة التي اشتريتها أو في صندوق تخزين منفصل.

DV80H4000CX-03408G-01_AR.indd Sec10:28 2014-08-21 12:25:00

تفريغ الماء المتكثف (💧)

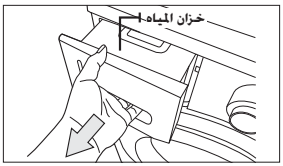

١. اسحب خزان المياه للأمام لفصله.

تنبيه: عند إزالة خزان المياه من المنتج، امسكه بكلتا يديك لأنه ثقيل، وانتبه جيدًا لكي لا تُسقط أي ماء داخل الخزان. وإلا، قد ينتج عن ذلك إصابة رسغ يديك.

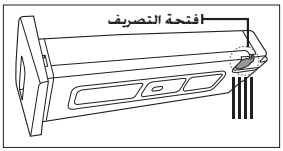

٢. أزل الماء المتكثف الموجود داخل الخزان.
- أزل الماء المتكثف الموجود في الخزان بعد كل عملية تجفيف.

تحذير: تأكد من تصريف الماء، لأنه قد ينشأ خطر تسرب الماء إذا لم تقم بتصريفه بعد استخدام المنتج.

إذا قمت بإفراغ خزان المياه والضغط على الزر **بدء/إيقاف مؤقت**، يتم إيقاف تشغيل العلامة Water Tank Full (خزان الماء ممتلئ) (💧) الموجودة في لوحة LED.

تنظيف حاوية المصفاة (▦)

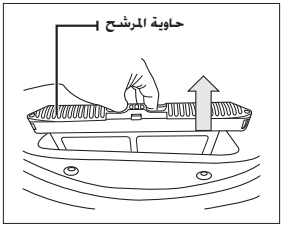

١. افتح الباب وقم بإزالة المصفاة بسحبها لأعلى.

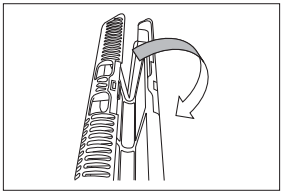

٢. افتح حاوية المصفاة وقم بتنظيفها.
- قم بتنظيف حاوية المصفاة بعد اكتمال عملية التجفيف.

تنبيه:
- قد يقل أداء التجفيف ويكون هناك خطر نشوب حريق إذا لم تقم بتنظيف علبة المصفاة بعد كل فترة استخدام محددة؛ لذا، نظف علبة المصفاة في فترات التنظيف المحددة.
- نظرًا لاحتمال تدهور أداء التجفيف مع نشوء خطر حدوث حريق إذا قمت باستخدام حاوية مصفاة تالفة أو مكسورة، فعليك استبدل حاوية المصفاة في هذه الحاوية.
- قم بتنظيف حاوية المصفاة بعد كل عملية تجفيف.

- إذا كان السطح الخارجي للمصفاة مبتلاً، فاستخدم المصفاة بعد تجفيفها بشكل كامل.
- إذا قمت بتنظيف علبة المصفاة مع الضغط على الزر **بدء/إيقاف مؤقت**، فيتم إيقاف تشغيل المصفاة (▦) في لوحة LED.

DV80H4000CX-03408G-01_AR.indd Sec10:29 2014-08-21 12:25:00

العناية والنظافة

تنظيف مكونات المكثف

١. قم بفتح غطاء حجرة المكثف.

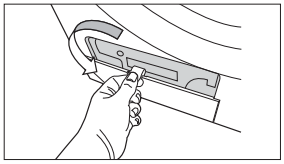

٢. قم بفك قفل مثبت المكثف.

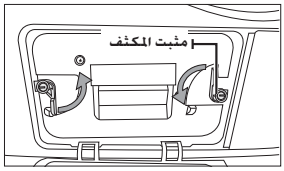

٣. قم بفك المكثف.

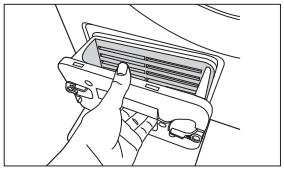

٤. قم بتنظيف المكثف بشكل كامل تحت الصنبور لتسمح للماء بالتدفق خلاله.

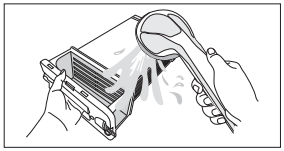

تنبيه

- نظرًا لاحتمال تدهور أداء التجفيف إذا لم تقم بتنظيف المكثف بعد فترة محددة من الاستخدام، قم بتنظيف المكثف في فترات التنظيف المحددة.
- قم بتنظيفه مرة كل شهر.
- عند تركيب المكثف بعد تنظيفه، تأكد من ضبط مثبت المكثف في موضع القفل.

DV80H4000CX-03408G-01_AR.indd Sec10:30 2014-08-21 12:25:00

النصائح الخاصة بالغسيل

النصائح الخاصة بالغسيل

الرجاء اتباع بطاقة العناية أو إرشادات الشركة المصنّعة الخاصة بتجفيف قطع غسيل معينة. إذا لم تتوفر إرشادات رمز علامة العناية، استخدم المعلومات الآتية كدليل.

أغطية السرير والألحفة	• اتبع إرشادات بطاقة العناية أو قم بالتجفيف من خلال **قطن** (تجفيف الخزانة) ودرجة حرارة مرتفعة. • تأكد من تجفيف العناصر تمامًا قبل الاستخدام أو التخزين. • قد يتطلب تصحيح موضعه لضمان التجفيف التام.
البطانيات	• استخدم **قطن** (تجفيف الخزانة). وقم بتجفيف بطانية واحدة فقط في المرة الواحدة للحصول على أفضل أداء للتدوير. • تأكد من تجفيف العناصر تمامًا قبل الاستخدام أو التخزين.
حفاظات الملابس	• استخدم **قطن** (تجفيف الخزانة) وإعدادات درجة الحرارة المرتفعة للحفاضات الرقيقة والناعمة.
قطع الغسيل المملوءة بالحشو (الجواكيت وحقائب النوم والألحفة وما إلى ذلك)	• استخدم **قطن** (تجفيف الخزانة) وإعداد «درجة الحرارة المنخفضة». تعمل إضافة زوج من المناشف على تقليل وقت التجفيف وامتصاص كمية الرطوبة.
مطاط إسفنجي (أغلفة السجاد والدمى المحشوة وألحفة الكتف، وما إلى ذلك.)	• لا تقم بالتجفيف عند التشغيل على أحد إعدادات التسخين. استخدم الدورة **هواء بارد** (بدون حرارة). • تحذير - قد يؤدي تجفيف قطعة غسيل مطاطية بالحرارة إلى تلفها أو إلى خطر نشوب حريق.
الوسائد	• استخدم **قطن** (تجفيف الخزانة). • أضف زوج من المناشف الجافة للمساعدة في عملية التدوير وتحسين نعومة العنصر. • لا تجفف الكابوك أو الوسائد المحشوة داخل المجفف. استخدام الدورة **هواء بارد**.
المواد البلاستيكية (ستائر الحمام وأغطية الأثاث الخارجي وما إلى ذلك.)	• استخدم الدورة **هواء بارد** أو الدورة **وقت التجفيف** وإعدادات الوضع "منخفض" أو درجة الحرارة "المنخفضة" وفقًا لإرشادات بطاقة العناية.

أشياء مهمة لتتجنبها :

- عناصر الملابس المصنوعة من الفيبرجلاس (الستائر وأغطية الأثاث وما إلى ذلك).
- الملابس الصوفية، باستثناء المُوصى بها على بطاقة العناية.
- عناصر الملابس الملوثة بزيت نباتي أو زيت الطهي.

DV80H4000CX-03408G-01_AR.indd Sec8:31 2014-08-21 12:25:01

استكشاف المشاكل وحلها

تحقق مما يلي إذا كان المجفف...

المشكلة	الحل
لا يعمل.	• تأكد من إغلاق الباب بإحكام بالمزلاج. • تأكد من توصيل سلك التيار الكهربي بمنفذ تيار كهربي مباشر. • افحص المنصهرات وقواطع الدوائر في المنزل. • اضغط على الزر بدء/إيقاف مؤقت مرة أخرى إذا تم فتح الباب أثناء تشغيل الدورة. • أفرغ الماء الموجود في خزان المياه المتكثف. • قم بتنظيف حاوية المصفاة.
لا يقوم بالتسخين.	• افحص المنصهرات وقواطع الدوائر في المنزل. • حدد إعداد تسخين غير الإعداد هواء بارد. • تحقق من حاوية المصفاة والمكثف وقم بتنظيفهما إذا كانت هناك ضرورة. • قد يتم نقل المجفف إلى مرحلة التبريد في بالدورة.
لا يقوم بالتجفيف.	• تحقق من جميع الإجراءات أعلاه. بالإضافة إلى... • ممنوع الإفراط في تحميل الملابس. ١ حمولة غسيل = ١ حمولة مجفف. • قم بفرز العناصر ثقيلة الوزن من العناصر الخفيفة. • قد تتطلب عناصر الغسيل كبيرة الحجم مثل البطاطين أو الأخفة تصحيح موضعها لضمان التجفيف التام. • تحقق أن المجفف يقوم بالتصريف بطريقة صحيحة لامتصاص كمية مياه كافية من حمولة الملابس. • قد تكون حمولة الملابس صغيرة للغاية بحيث يتعذر تدويرها بطريقة صحيحة. قم بإضافة كمية قليلة من المناشف. • قم بتنظيف حاوية المصفاة. • قم بتنظيف المكثف. • تحقق مما إذا ما كانت فتحة هواء التبريد مغلقة.
هل يوجد ضوضاء.	• تحقق من وجود بعض الأجسام مثل العملات المعدنية والأزرار المفكوكة والمسامير داخل الحمولة. وقم بإزالتها على الفور. • تأكد من تسوية المجفف بشكل صحيح كما هو موضح في إرشادات التركيب. • يُعد أمرًا طبيعيًا أن يكون هناك صوت "همهمة" نتيجة للسرعة العالية للهواء المتحرك خلال حاوية المجفف والمروحة.
التجفيف بشكل غير تام.	• قد يتعذر تجفيف الحواشي المخيطة والجيوب وبعض المناطق الثقيلة التي تشبهها عند وصول بقية الحمولة إلى مستوى التجفيف المحدد. ويعد هذا أمرًا طبيعيًا. حدد إعداد التجفيف الإضافي إذا رغبت في ذلك. • إذا تم تجفيف عنصر واحد ثقيل مع حمولة خفيفة الوزن. على سبيل المثال منشفه مع ملاءة. قد يكون من الممكن أنه لم يتم تجفيف العنصر الثقيل بشكل كامل عند وصول بقية الحمولة إلى مستوى التجفيف المحدد. قم بفرز عناصر الملابس ثقيلة الحجم عن الخفيفة للحصول على نتائج التجفيف المثلى.
هل توجد رائحة.	• قد تدخل الروائح المنزلية الناتجة عن. الدهان أو الطلاء أو المنظفات القوية أو ما إلى ذلك. داخل المجفف محملة بالهواء المحيط بالغرفة. يُعد أمرًا طبيعيًا أن يقوم المجفف بجلب الهواء من الغرفة وتسخينه وسحبه خلال الحاوية والتخلص منه خارجًا. • عندما تَظل هذه الروائح محملة في الهواء. قم بتهوية الغرفة بشكلٍ كامل قبل استخدام المجفف.
إيقاف التشغيل قبل تجفيف الحمولة	• الأشياء المراد تجفيفها صغيرة جدًا. قم بإضافة كمية أكبر من عناصر الملابس وعدة مناشف وأعد تشغيل الدورة. • الأشياء المراد تجفيفها كبيرة جدًا. قم بإزالة بعض عناصر الملابس وأعد تشغيل المجفف.

DV80H4000CX-03408G-01_AR.indd Sec6:32 2014-08-21 12:25:01

المشكلة	الحل
النسالة الموجودة بالملابس	• تأكد من تنظيف مصفاة النسالة قبل كل حمولة. بالنسبة لبعض حمولات الملابس التي ينتج عنها كمية كبيرة من النُسالة، قد يكون من الضروري تنظيف حاوية المرشح أثناء الدورة. • بعض الملابس تكون مخرِّجة للنُسالة (على سبيل المثال، مناشف القطن البيضاء الناعمة) وينبغي تجفيفها بشكل منفصل عن الملابس التي تتشابك مع النُسالة (على سبيل المثال، سروال أسود من الكتان) • قم بتقسيم حمولات الملابس كبيرة الحجم لأخرى صغيرة حتى يُمكن تجفيفها • قم بفحص الجيوب تمامًا وملابس التجفيف قبل عملية التجفيف.
تظل الملابس مكرمشة بعد تشغيل خاصية "منع التجعد"	• تعمل الحمولات الصغيرة المكونة من ١ إلى ٤ عناصر بشكل أفضل. • قم بتحميل كمية قليلة من الملابس مع تحميل الملابس المتشابهة.
تظل الروائح في الملابس بعد تشغيل خاصية الإنعاش.	• ينبغي غسل الملابس التي تحتوي على روائح قوية.

DV80H4000CX-03408G-01_AR.indd Sec6:33 2014-08-21 12:25:01

استكشاف المشاكل وحلها

رموز المعلومات

قد يتم عرض رموز المعلومات للمساعدة في فهم الحادث داخل "المجفف" على نحو أفضل.

شاشة الأخطاء	المعنى	الحل
tE	تم سد حاوية المصفاة المثقلة.	قم بتنظيف حاوية المصفاة أو المكثف. إذا استمرت المشكلة، قم بالاتصال بخدمة الصيانة.
tE5		
dE	تشغيل المجفف أثناء فتح الباب	قم بغلق الباب ثم أعد التشغيل. إذا استمر حدوث المشكلة قم بالاتصال بخدمة الصيانة.
bE	علق الزر لأكثر من ٣٠ ثانية	تأكد من عدم الضغط على الزر باستمرار، أعد محاولة إعادة تشغيل الدورة. وإذا استمرت المشكلة، قم بالاتصال بخدمة الصيانة.
hE	تم سد حاوية المصفاة المثقلة. درجة حرارة للتسخين غير صالحة عند تشغيل المجفف.	قم بتنظيف حاوية المصفاة أو المكثف. إذا استمرت المشكلة قم بالاتصال بخدمة الصيانة
5E	خزان المياه مملوء. مضخة التصريف معطلة.	أفرغ خزان المياه وأعد التشغيل مرة أخرى. إذا استمرت المشكلة، قم بالاتصال بخدمة الصيانة.

بالنسبة للرموز التي لم تذكر أعلاه، أو إذا لم يعمل الحل المقترح على حل المشكلة، اتصل بمركز خدمة Samsung أو الموزّع المحلي المعتمد التابع لشركة Samsung.

DV80H4000CX-03408G-01_AR.indd Sec6:34 2014-08-21 12:25:01

الملحق

جدول العناية بالأقمشة

توضح الرموز التالية تعليمات العناية بالملابس. تتضمن بطاقات العناية بالملابس رموزًا خاصة بالتجفيف والتبييض والتجفيف والكي أو التنظيف الجاف عند الضرورة. يضمن استخدام هذه الرموز التناسق بين الشركات المصنّعة للملابس المحلية والمستوردة. اتبع تعليمات بطاقة العناية لزيادة عمر الملابس وتقليل مشاكل الغسيل.

دورة الغسيل		إرشادات خاصة		رموز تحذيرية في عملية الغسيل	
عادي		تجفيف على الحبل/ تعليق للتجفيف		لا تغسل	
الملابس المقاومة للتجاعيد / منع الكرمشة / التحكم في الكرمشة		التجفيف بالتعليق		لا تضغط	
الملابس الناعمة/الرقيقة		تجفف وهي مفرودة		لا تستخدم مادة تبييض	
غسل يدوي		**إعدادات التسخين**		لا تجفف بالتدوير	
درجة حرارة الماء**		عالٍ		لا يوجد بخار (يُضاف للكي)	
●●●	ساخن	متوسط		ممنوع الكي	
●●	دافئ	منخفض		**تنظيف جاف**	
●	بارد	أي درجة من السخونة		تنظيف جاف	
مادة تبييض		بدون تسخين/هواء		ممنوع استخدام التنظيف الجاف	
أي مادة تبييض (عند الحاجة)		**التجفيف بالكي أو درجات حرارة البخار**		تجفيف على الحبل/ تعليق للتجفيف	
خالي من الكلور فقط (لون آمن) مادة تبييض (عند الحاجة)		عالٍ		التجفيف بالتعليق	
دورة تجفيف بالتدوير		متوسط		تجفف وهي مفرودة	
عادي		منخفض			
الملابس المقاومة للتجاعيد / منع الكرمشة / التحكم في الكرمشة					
الملابس الناعمة/الرقيقة					

** تمثل الرموز المنقطة درجات حرارة مياه الغسيل المناسبة لعناصر الملابس المختلفة. يتراوح نطاق درجة الحرارة الخاص بالإعداد "ساخن" بين ٤١ و٥٢ درجة مئوية وبالنسبة لإعداد "دافئ" فيكون بين ٢٩ و٤١ درجة مئوية وبالنسبة لإعداد "بارد" فيكون بين ١٦ و٢٩ درجة مئوية. (يتعين أن يكون الحد الأدنى لدرجة حرارة مياه الغسيل ١٦ درجة مئوية لتنشيط المسحوق والتنظيف الفعال.)

DV80H4000CX-03408G-01_AR.indd Sec4:35 2014-08-21 12:25:01

الملحق

حماية البيئة

هذا الجهاز مصنوع من مواد قابلة لإعادة التدوير. إذا قررت التخلص من هذا الجهاز، يُرجى مراعاة القوانين المحلية الخاصة بالتخلص من النفايات. اقطع سلك التيار بحيث لا يمكن توصيل الجهاز بمصدر طاقة. فك الباب لمنع تعرض الحيوانات أو الأطفال الصغار للاحتباس داخل الجهاز.

بيان التوافق

يتوافق هذا الجهاز مع معايير السلامة الأوروبية (EN Standard 60335و 93/68 EC directive).

المواصفات

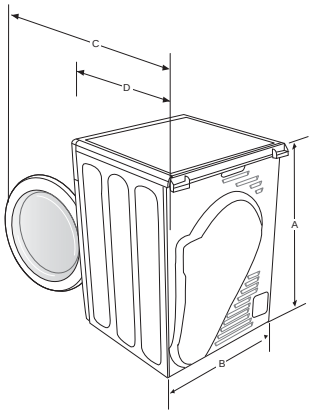

النوع		مجفف أمامي للتحميل
الأبعاد	A. ارتفاع	٨٥,٠ سم
	B. عرض	٦٠,٠ سم
	C. عمق مع فتح بمقدار ٩٠ درجة	١١٠,٩ سم
	D. عمق	٦٠,٠ سم
الوزن		٤٢ كجم
تصنيف السخان		٢٥٠٠ وات (١٧٥٠ وات+٧٥٠ وات)
استهلاك الطاقة	بدون حرارة	١٧٥ واط
	التسخين	٢٦٧٥ واط
درجة الحرارة المسموح بها		من ٥ إلى ٣٥ درجة مئوية

تم تحديد مواصفات ملصق الطاقة باستخدام البرنامج الآتي وفقًا للمعيار UAE.S 5010 2:2013.

- البرنامج هو «خزانة قطن. درجة حرارة مرتفعة مع إيقاف تشغيل مقاومة التجعد».

DV80H4000CX-03408G-01_AR.indd Sec4:36 2014-08-21 12:25:01

جدول الدورات

(● خيار المستخدم)

الدورة		أقصى وزن (كجم) (ملابس جافة)	درجة الحرارة	منع التجعد	جرس تحميل متنوع	مصباح	مغلق / تشغيل صوت	تأجيل التشغيل
قطن	تجفيف إضافي	٨	●	●	●	●	●	●
	تجفيف الخزانة		●	●	●	●	●	●
	تجفيف جاهز للكوي		●	●	-	●	●	●
مواد صناعية	تجفيف إضافي	٤	●	●	●	●	●	●
	تجفيف الخزانة		●	●	●	●	●	●
	تجفيف جاهز للكوي		●	●	-	●	●	●
صوف *		١	-	●	-	●	●	●
الملابس الحساسة		١	-	●	●	●	●	●
عذب		١,٥	-	●	-	●	●	●
ملابس رياضية		١,٥	-	●	●	●	●	●
تجفيف سريع		١	-	●	-	●	●	●
وقت التجفيف		-	●	●	-	●	●	●
هواء دافئ		-	-	●	-	●	●	●
هواء بارد		-	-	●	-	●	●	●

* قد تتم زيادة الوقت إلى ٤٣ دقيقة وفقًا لنسبة الصوف في الغسيل.

بيانات الاستهلاك

الطراز	البرنامج	الحمولة(كجم)*	الطاقة (كيلو وات في الساعة)	أقصى مدة (بالدقائق)
سلسلة DV8	خزانة القطن **	٨	٤,٧٠	١٤٥
		٤	٢,٥٧	٨٤
	كي القطن **	٨	٤,٥٣	١٠٥
	خزانة المواد الصناعية	٤	٢,٣٢	٧٠

١. * : وزن الغسيل الجاف

** : EN 61121: برنامج اختبار 2013

٢. جميع البيانات بدون علامة "الحمولة" يتم حسابها باستخدام EN 61121:2013

قد تختلف بيانات الاستهلاك عن القيم الاسمية المذكورة أعلاه وفقًا لحجم الحمولة وأنواع الملابس ومستويات الرطوبة المتبقية بعد التدوير واختلافات مزود درجة الحرارة وأي خيارات إضافية تم تحديدها.

DV80H4000CX-03408G-01_AR.indd Sec4:37 2014-08-21 12:25:01

ملاحظة

ملاحظة

SAMSUNG

هل لديك أي أسئلة أو تعليقات؟

البلد	اتصل	أو تفضل بزيارة موقعنا على الإنترنت
U.A.E	800-SAMSUNG (800 - 726 7864)	www.samsung.com/ae/support (English) www.samsung.com/ae_ar/support (Arabic)

DC68-03408G-01